

HP CD-Writer Program User Guide

- -
Ver. 2.0

HP CD-RW

Adaptec Easy CD Creator Copier, Direct CD

. HP CD-RW

,

.

Easy CD Creator 3.5C, Direct

CD 3.0

.

, HP

.

HP

CD-RW TEAM


(02-3270-0803)

< >

1.	CD	3
<1>	CD	5
<2>	CD	11
2.	CD	21
3.	DISC IMAGE	34
<1>	CD	34
<2>	CD	36
4.	CD EXTRA CD	44
5.	MIXED CD	47
6.	BOOTING() CD	48
<	>	50
A.	CD	FORMAT	50
B.	CD	51
<	WEB SITE	BBS>.....	51


CD CD CD 가 .

[]-[]-[HP CD Writer Plus] ‘Create a CD’

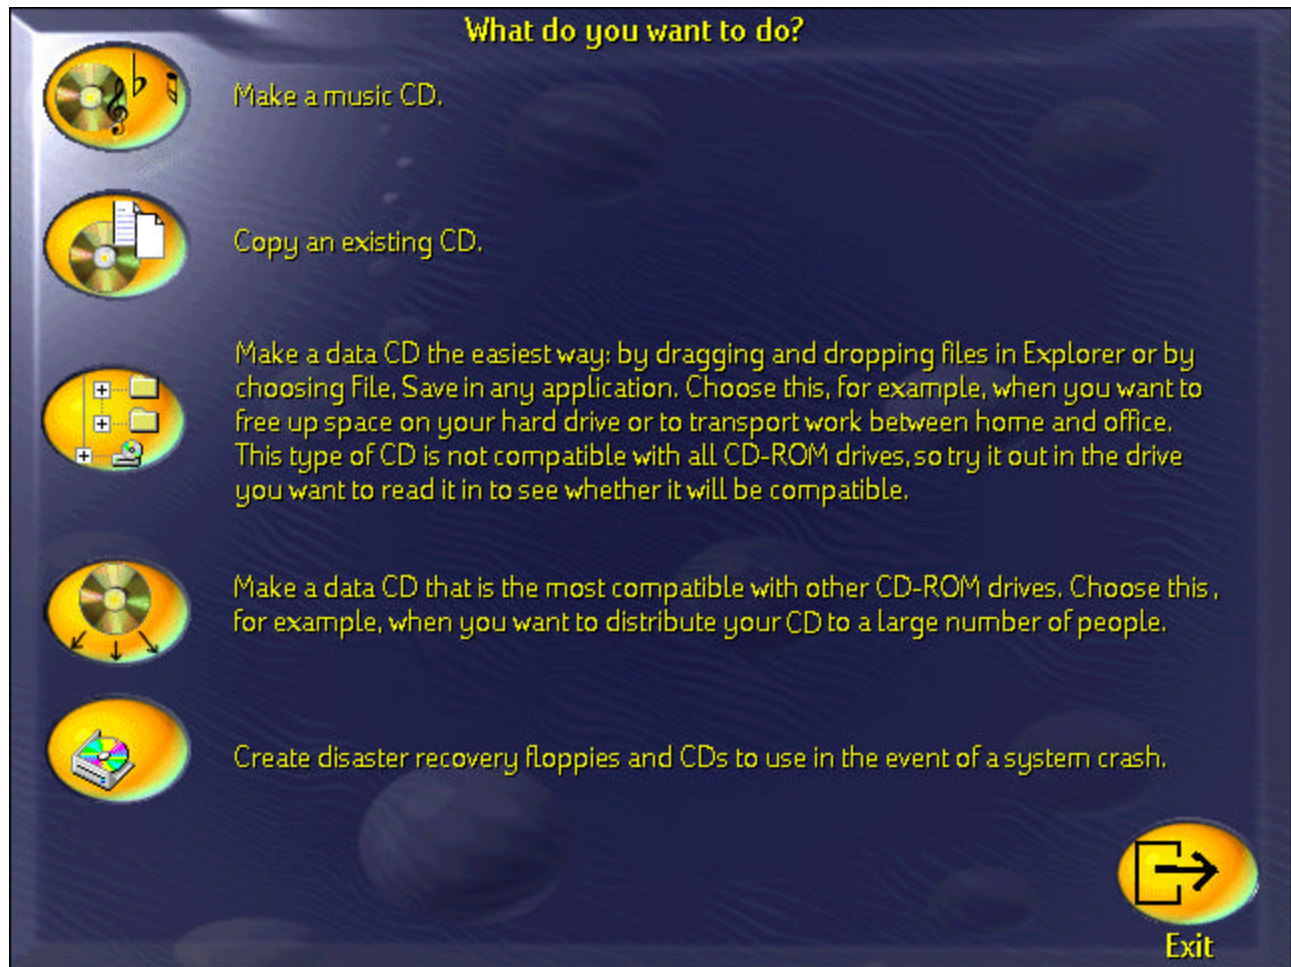

[Creator a CD]

- , CD (Easy CD Creator)
- , CD (CD Copier)
- , CD (Direct CD)
- , CD (Easy CD Creator)
- , (Disaster Recovery)

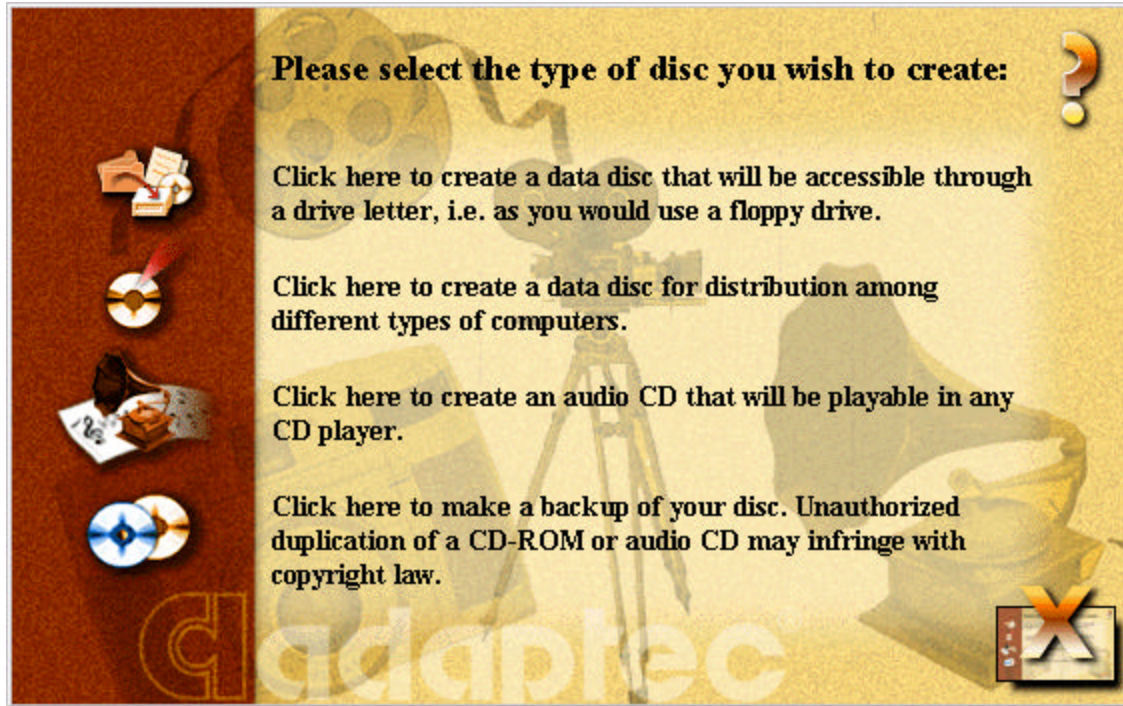

Blank CD-R Writer

CD-R

Create a CD

Create a CD

, Direct CD (CD)

, Easy CD Creator for Data Copy (CD CD)

, Easy CD Creator for Audio Copy (CD CD)

, CD Copier (CD)

) 가 가?

CD ? CD , CD
? CD , CD
? CD


✍

<1> CD

CD Creator Wizard()가
가
CD Creator
가



가
Data CD Audio CD (Next)

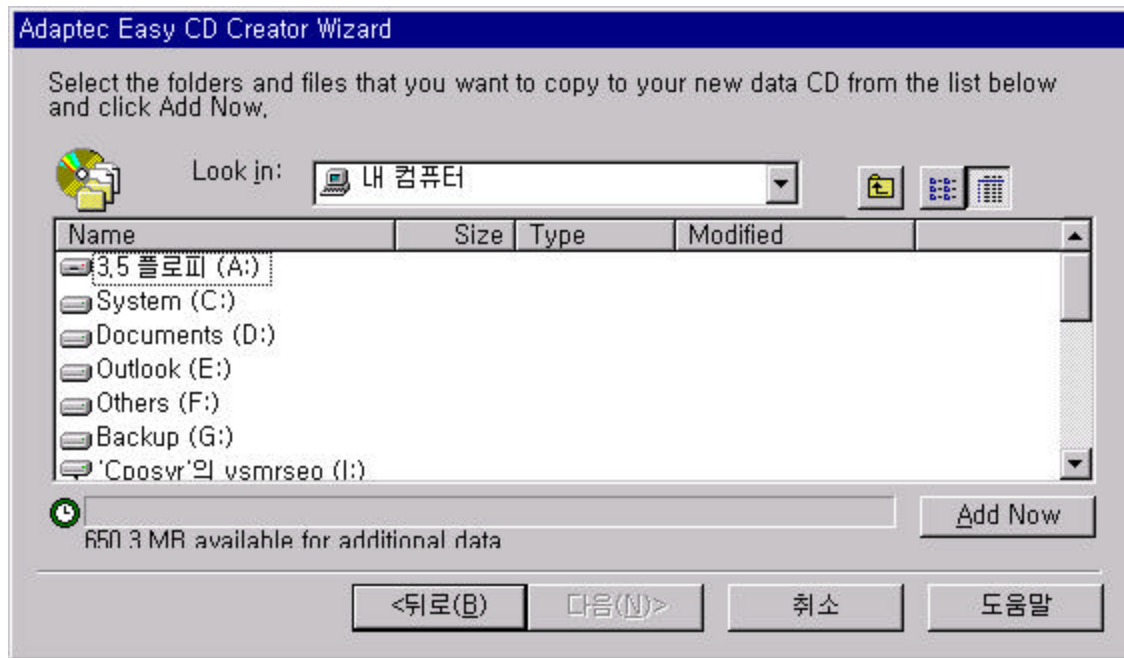

, 'Add Now'

/

CD Layout


가

,

가

Add Now

가

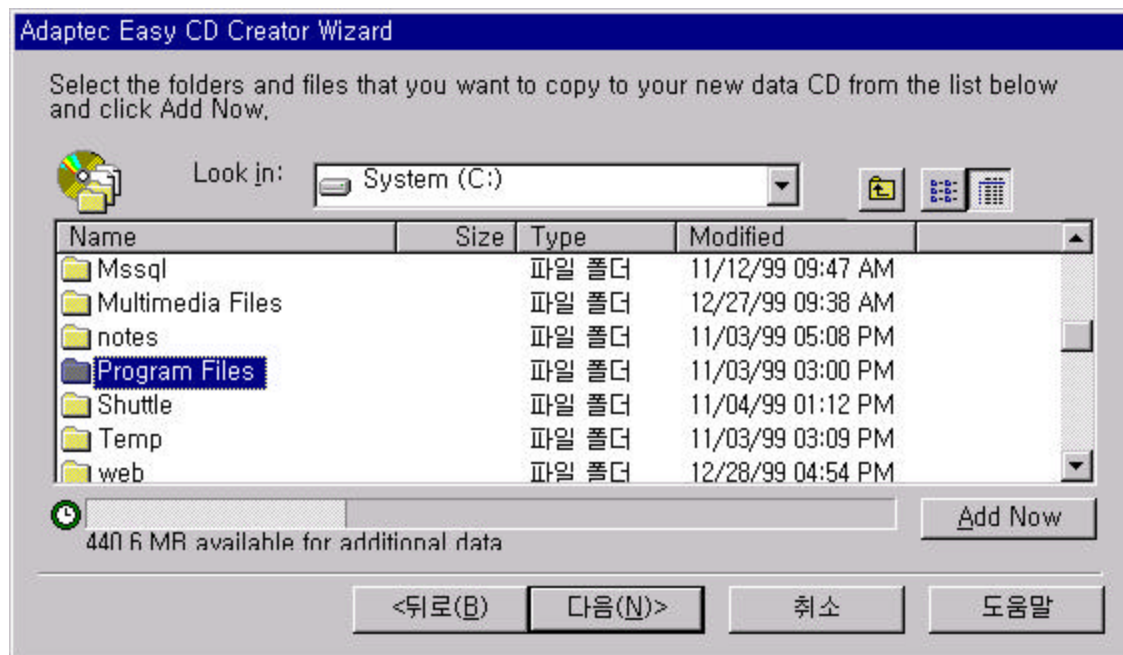


,

가

'

(N)


.

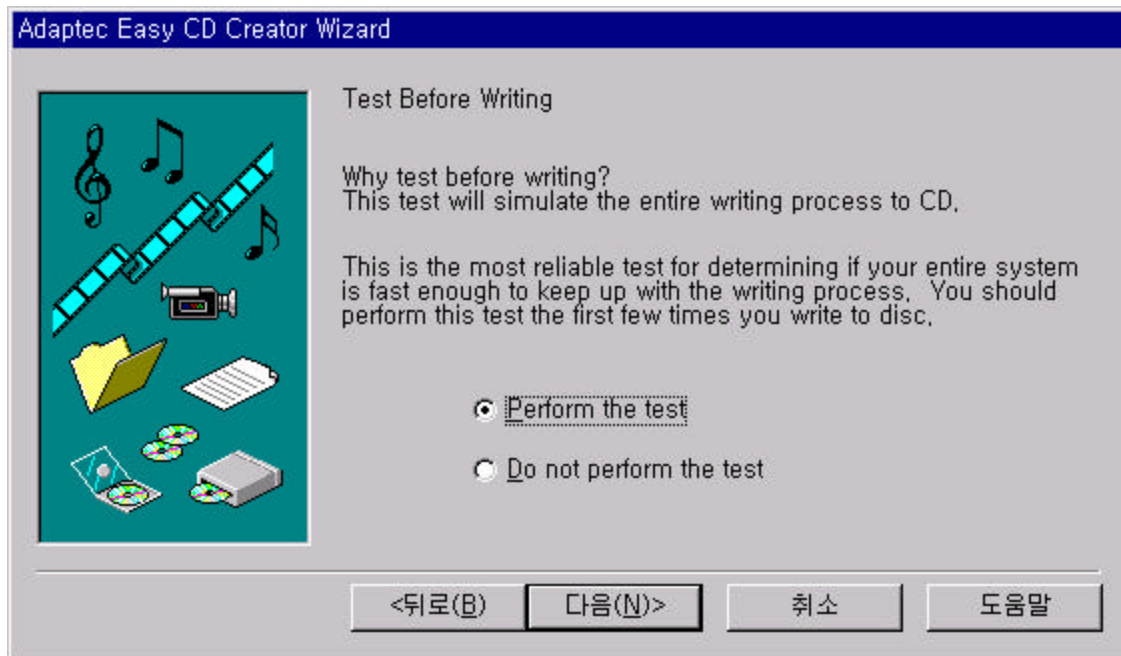

Test



가 , 'Do not perform the test'

(N)'

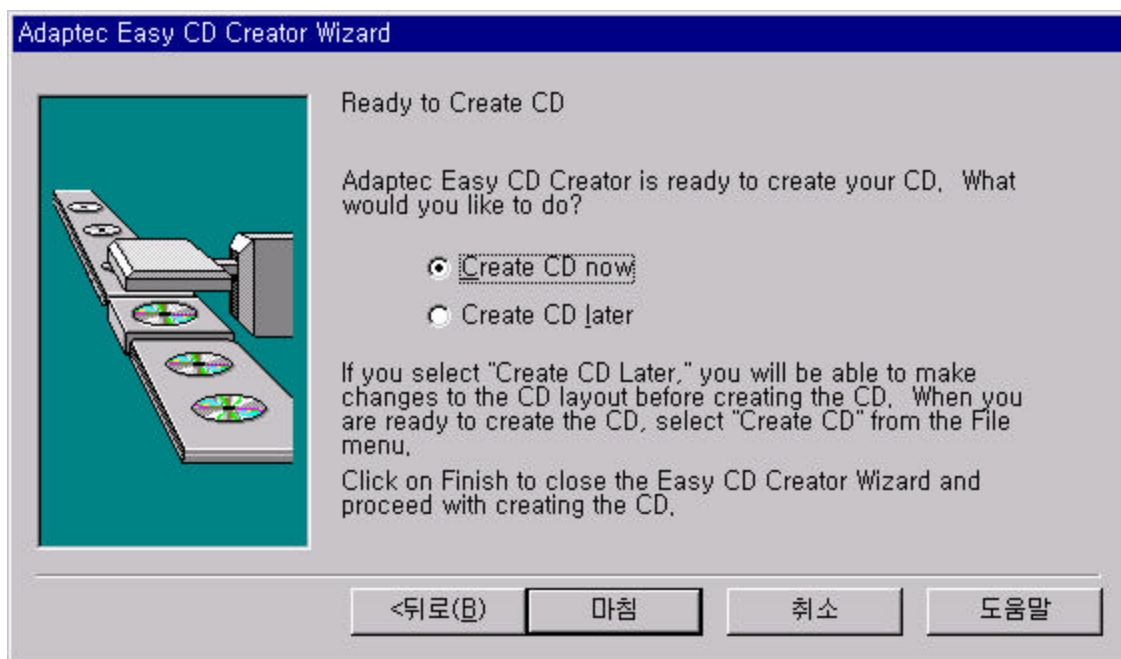


CD Creator


'Create CD later'

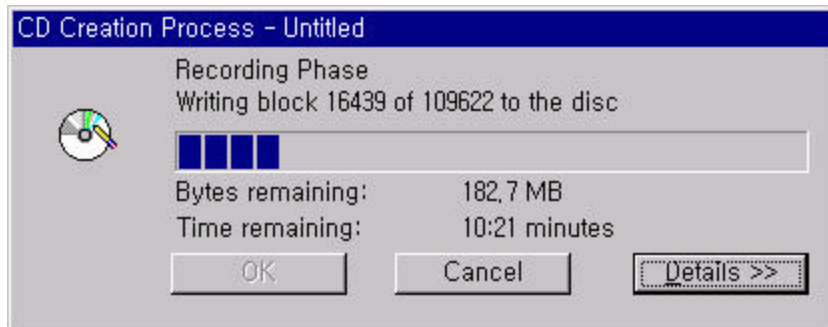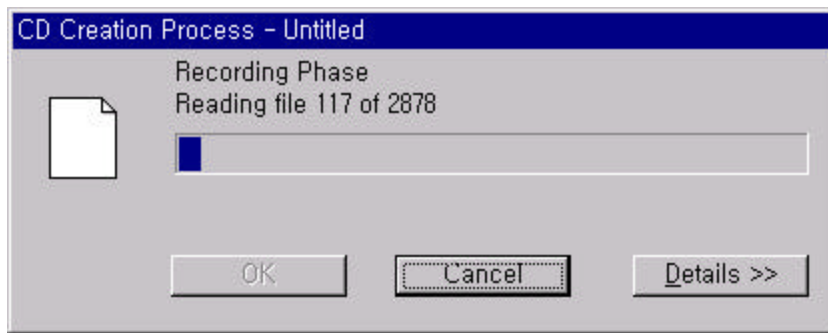

가
182.7Mb 10 21

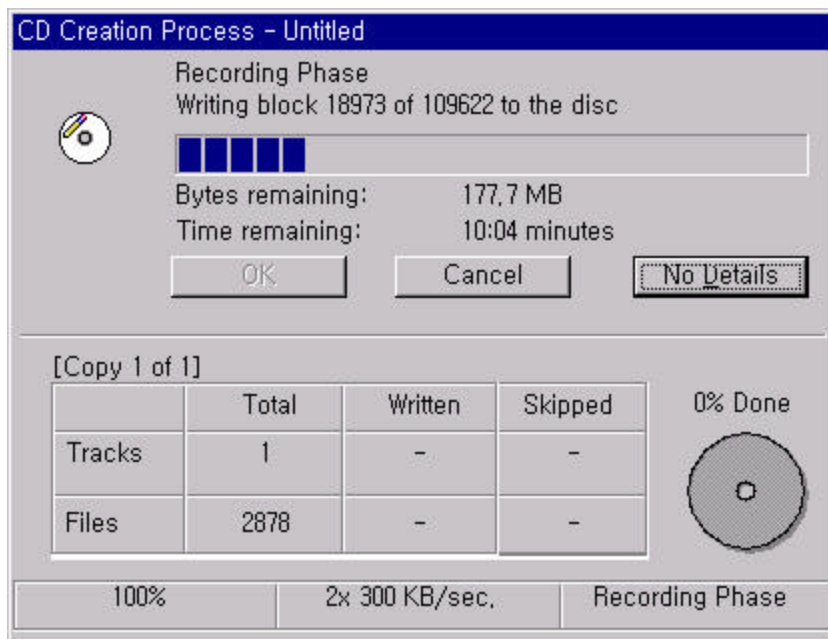

'Details'
가 2X 300KB/sec, Buffer Level 100%
Buffer Level, 2%~3%
Buffer Level, Buffer Level 0% 가 'Buffer
Under Run' 가

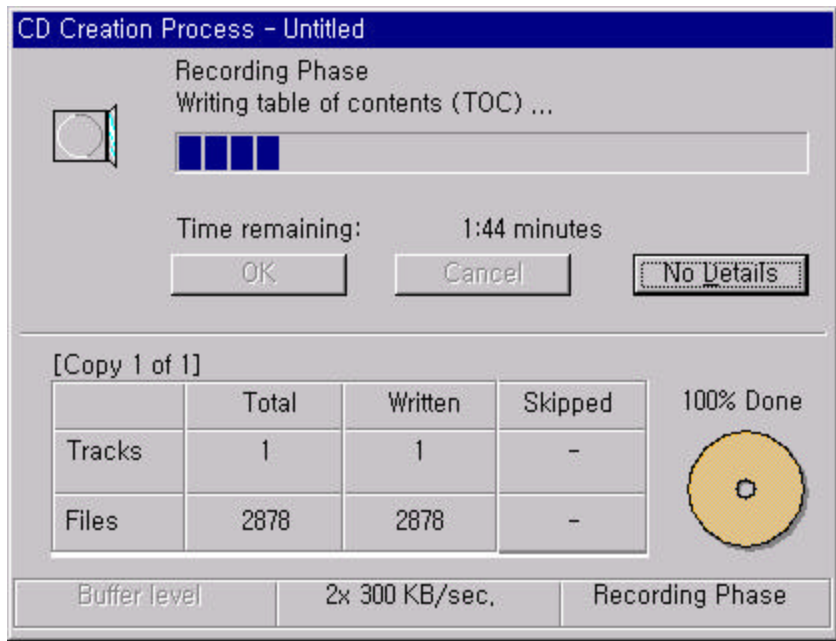


CD

TOC

가

CD

Organize the disc

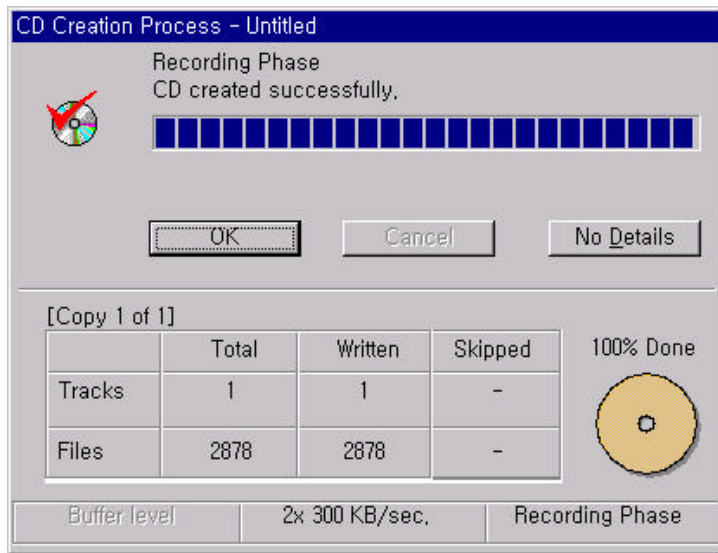

가

V

X 가

'Cancel'

'View Errors'

, 'View Errors'

가

CD Creator

CD

가

Note)

CD Creator

Tools - System Test

Transfer


Rate

8

CD

CD


가

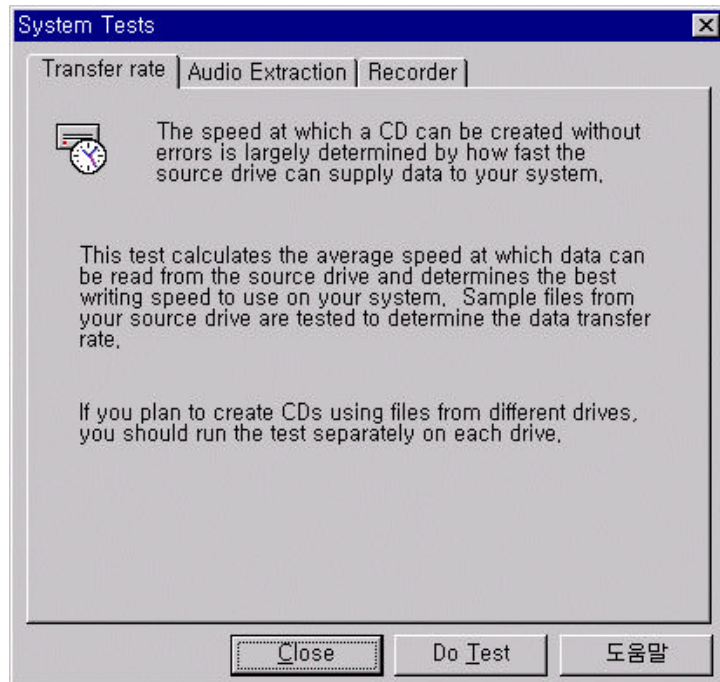

'Do Test'

Test

2

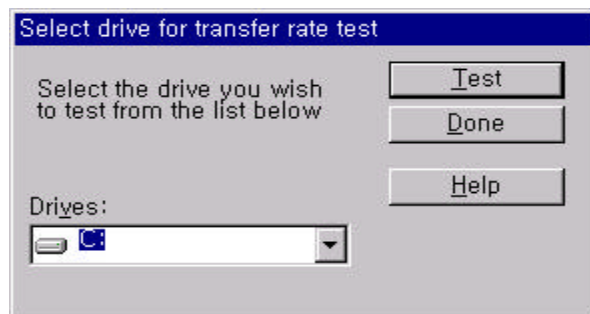

가




가 , 8 CD 가
 가 .
 . 가
 , , 8
 Reading Phase가
 % 가 가 , X 가 ,
 가 ,
 % CD 가 35 .

<2> CD


CD

CD-R, CD-RW , CD

CD , CD-Writer
 , CD Icon



Writer 가
 CD Icon X 가
 Create a CD , CD

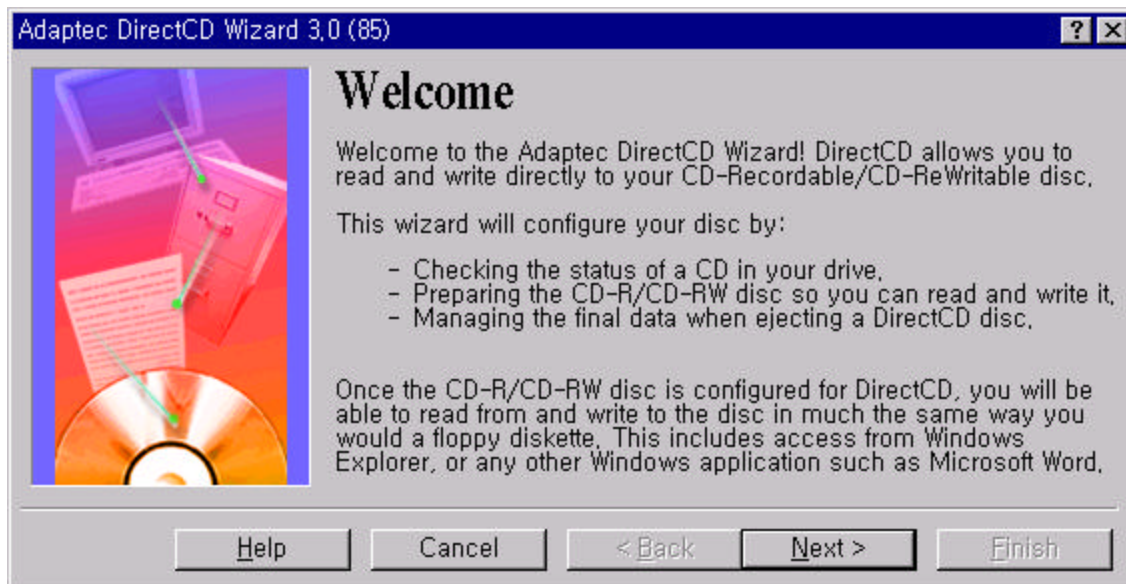

CD

CD CD-Writer

CD CD CD
 CD CD CD Creator CD Copier
 CD가 CD , CD 가 CD
 CD

Writer

CD

'Next'



CD-Writer CD-R

Media Status

, Blank CD-R disc


. 가

Properties

CD

Properties


'Next'

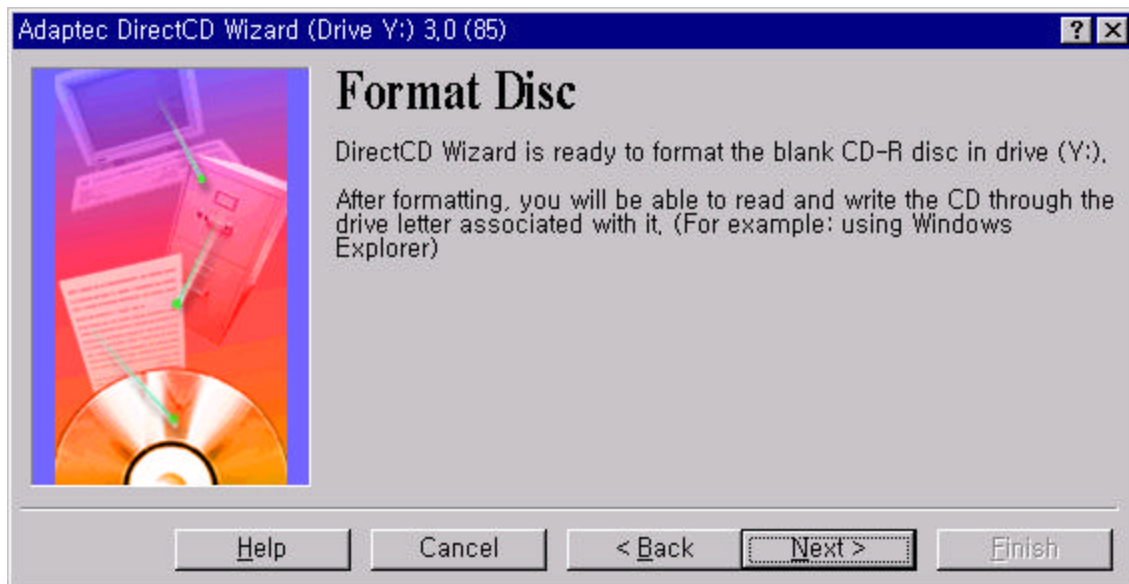


CD가 CD-R 가 .
'Next'

() CD-Writer CD가 CD-R , CD-RW Format Disc
 . CD-RW Fast Format Full Format 가
 . , Fast Format 8100 CD . (7100/7200
 .)


CD-RW

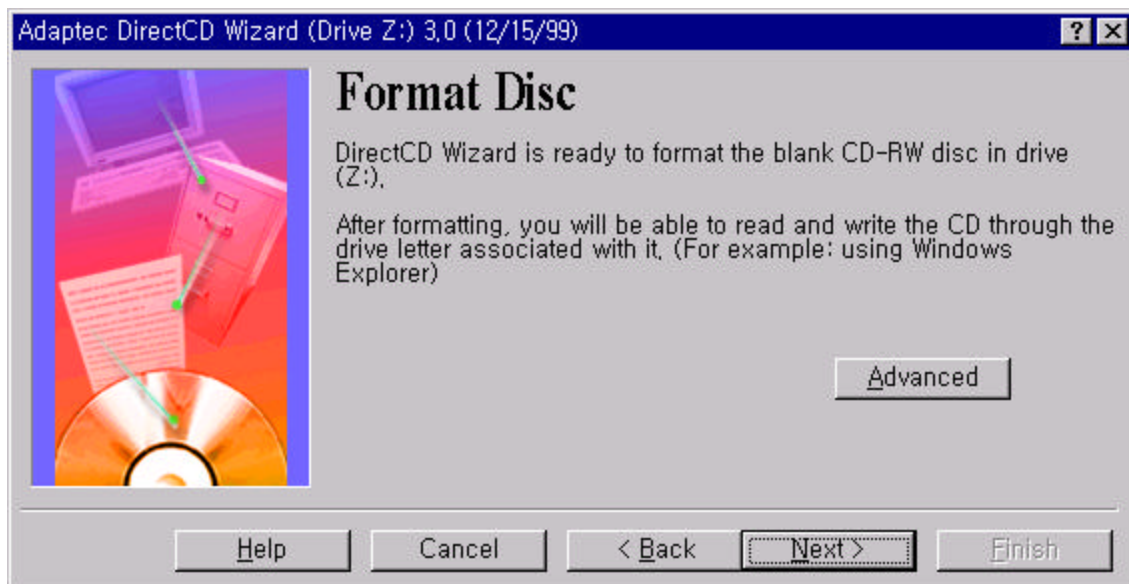

'Advanced'

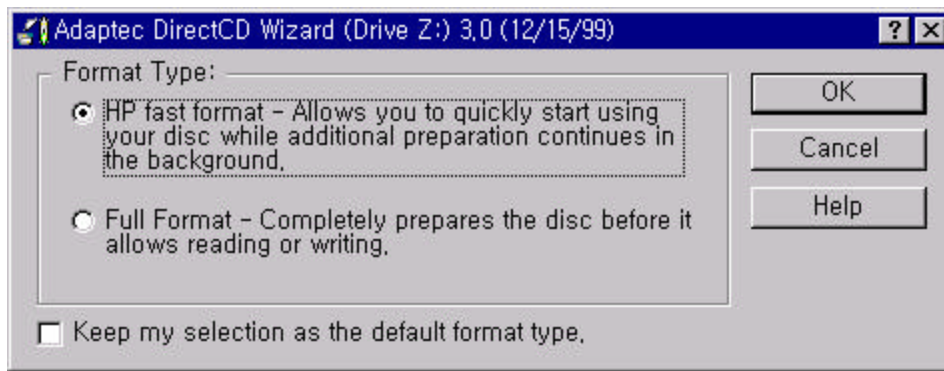


Fast Format Full Format

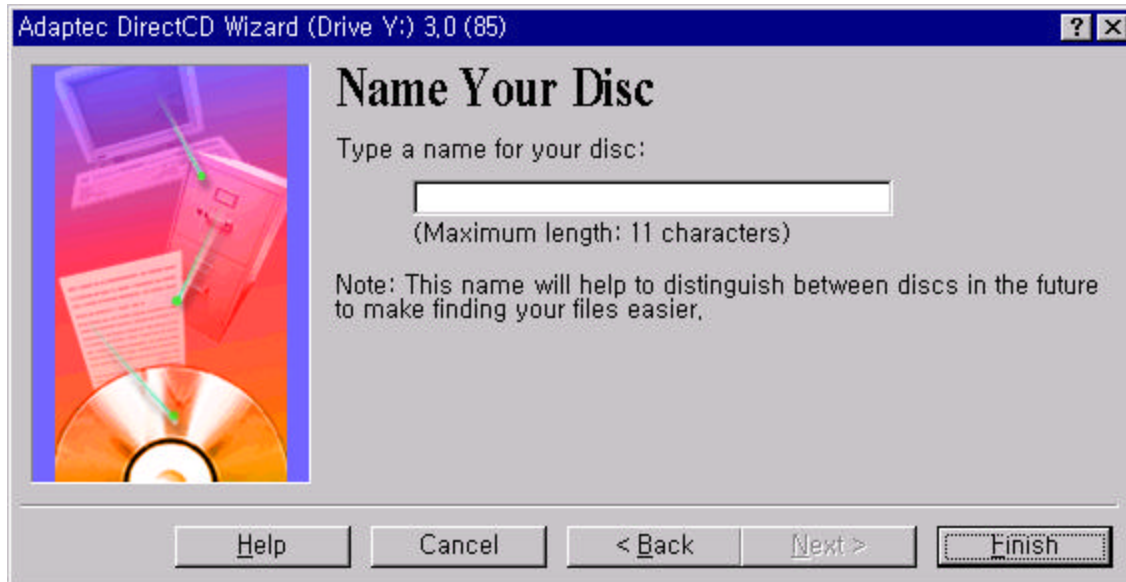


CD

11

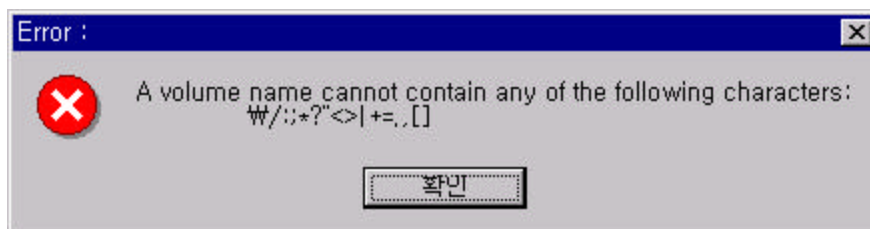


(A-Z, a-z), (0-9), (_)

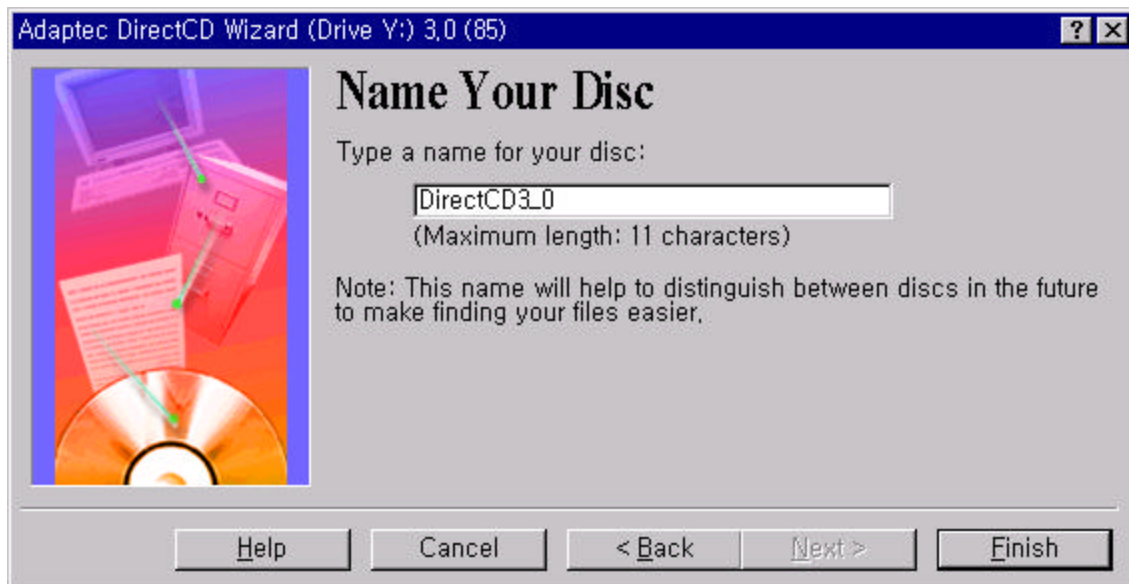


DirectCD3_0

'Finish'

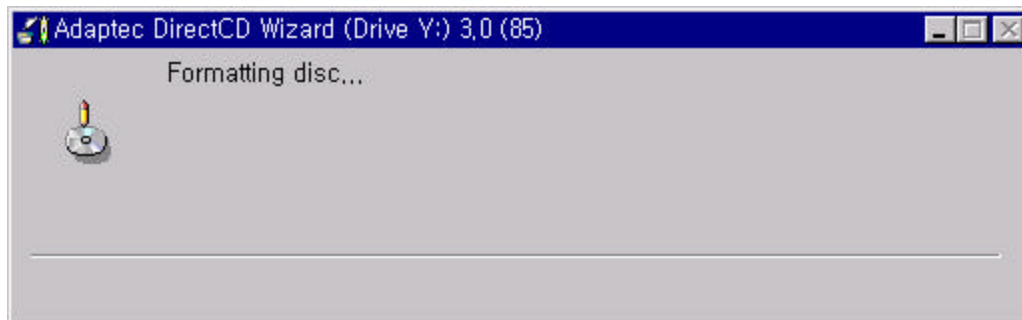

CD-R

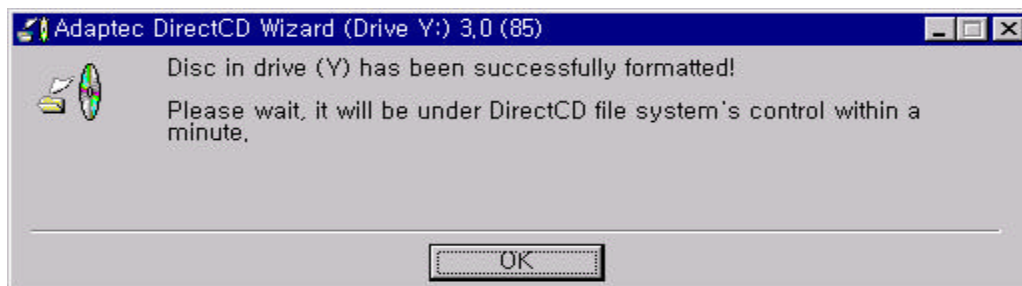

, 1

CD가


CD

. CD-R

, CD-RW CD

30

2

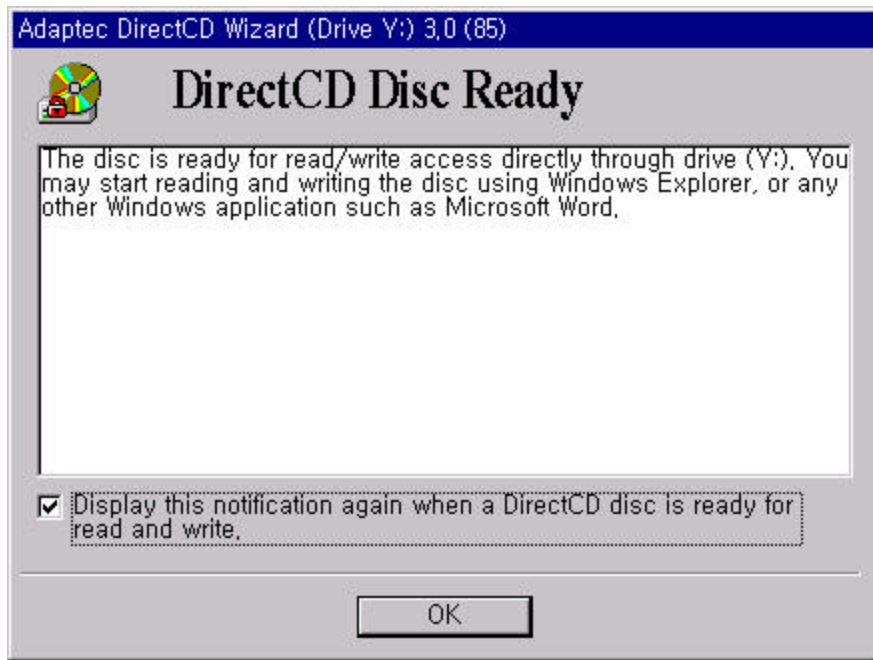


가

CD Writer

가

CD

Properties

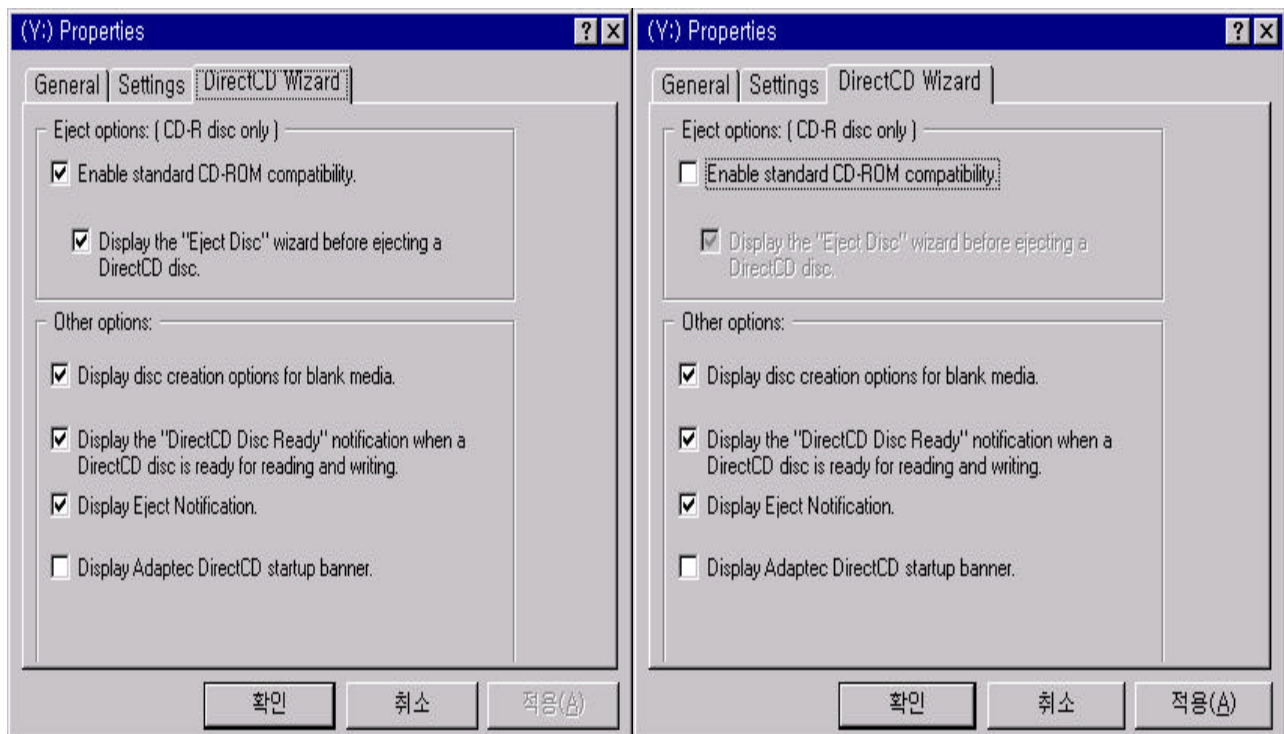

CD Properties

'Eject options' 'Other options'

Enable standard CD-ROM compatibility

가

Writer

CD

CD가

CD

CD

CD

Enable standard CD-ROM compatibility

가

'Display the 'Eject Disc' ...'

, CD-Writer

CD

Eject Button(

)



CD-R

CD

CD-RW

CD

eject()

Leave the disc ,

Organize the disc

가

Leave the disc

CD

CD

CD

CD

leave session open

Organize the disc

CD

CD

CD

가

CD


CD

가,

가

CD-R

가

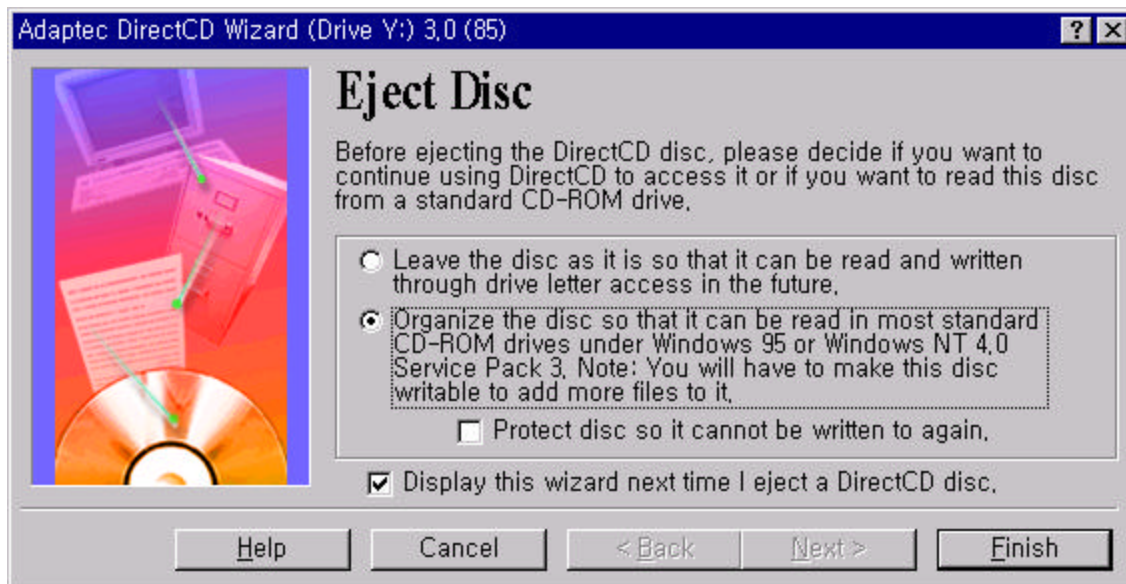


Organize the disc CD Close the session

Organize the disc 'Protect disc so...'


Protect disc CD Close the disc

가 'Display this wizard...'

Button Eject Disc Eject

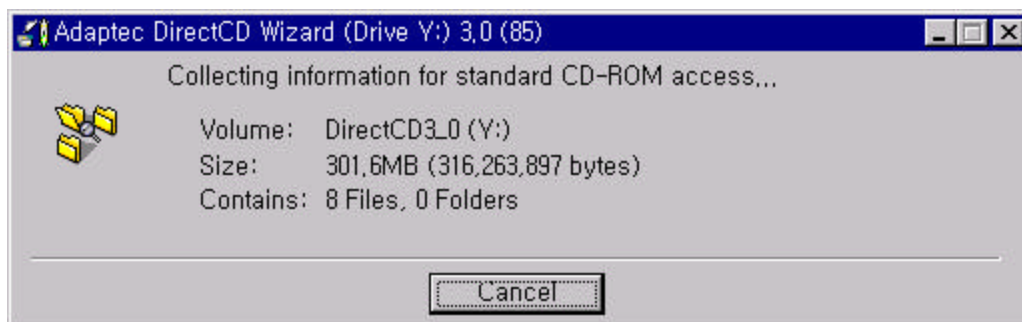

Organize the disc Finish CD

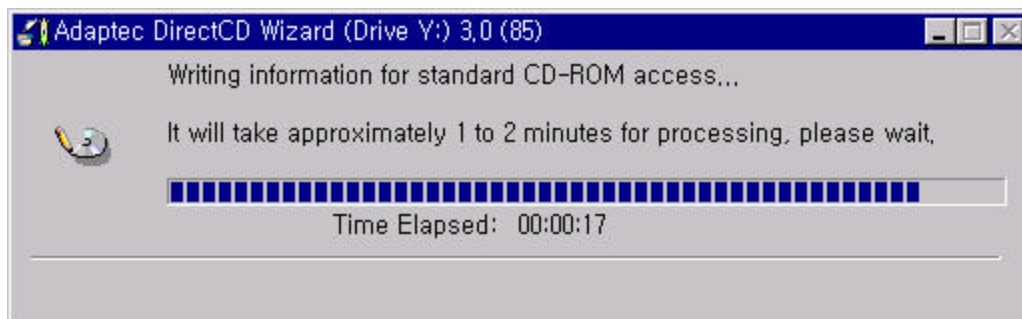


CD




CD가

Organize the disc CD-ROM Drive , CD-ROM Drive (2X, 4X ..)
 16 , 24 CD-ROM Drive 가 CD-ROM Drive
 CD CD CD-ROM Drive
 CD CD CD-ROM Drive

, Organize the disc CD-R 가 ?
 가

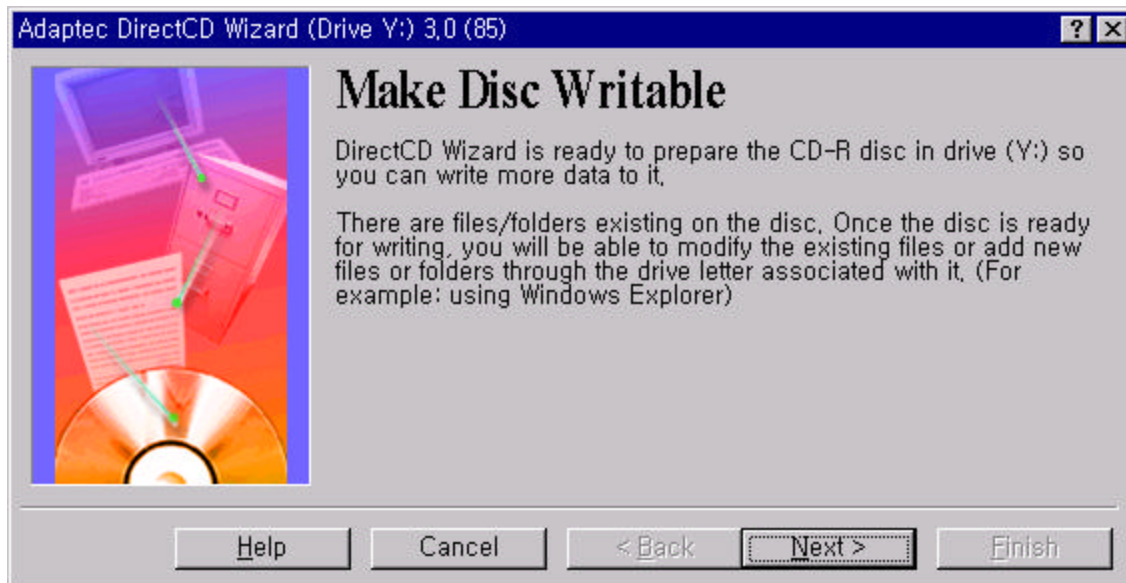

Organize the disc CD-R CD-Writer , CD Make
 Writable 가 CD-R
 CD-RW , CD-R

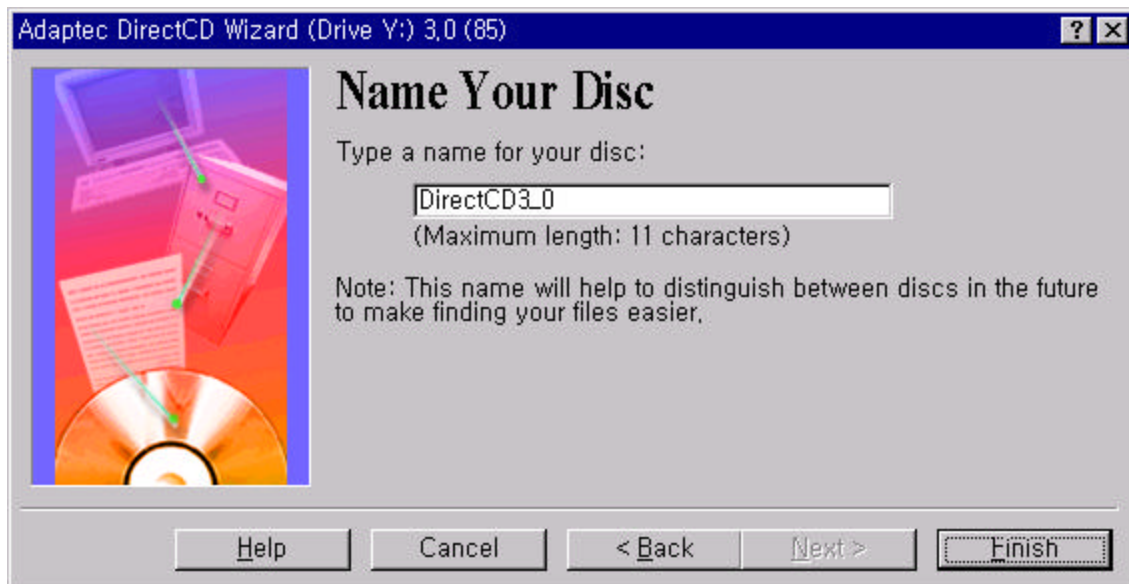

'Finish'

?

'Finish'

CD-R

CD

CD

CD

CD

?

CD

? (100M),

CD

?

CD

()

CD

CD

/

2. CD

CD


CD



CD

'Audio CD'

(N)

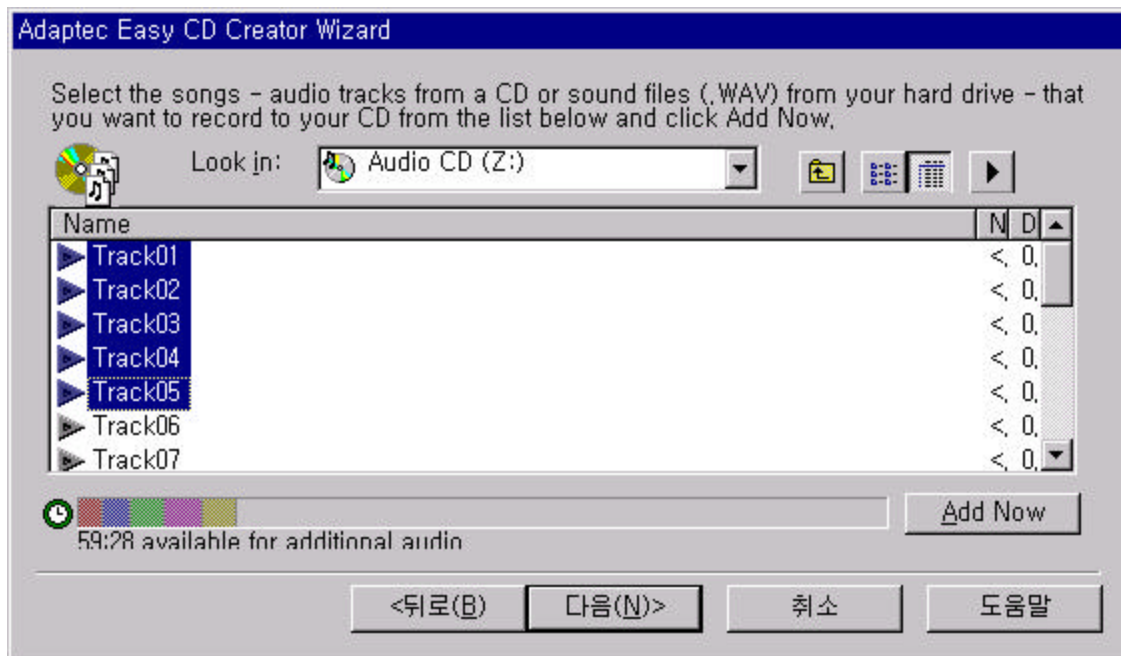

'Add Now'

가

CD

CD 18

가

, CD

18



Disc Title, Artist name



(N)

Disc title, Artist name

(N)



Leave the session open, Close the session

Session

Leave the session open

CD

가

CD

leave the session open

close the session

?

Close the session

CD-ROM Drive ,

가

CD

, CD

CD

CD-ROM Drive

, 가

CD

,

CD

CD Multi Session CD

, CD

CD

CD

CD-ROM Drive

Multi Session CD

,

Multi Session CD

Multi Session CD

가

,

Multi Session CD

CD

,

CD

close the session

CD Multi Session CD

CD

CD

74

Adaptec Easy CD Creator Wizard



Test Before Writing

Why test before writing?

This test will simulate the entire writing process to CD.

This is the most reliable test for determining if your entire system is fast enough to keep up with the writing process. You should perform this test the first few times you write to disc.

- ☒ Perform the test
- ☐ Do not perform the test


<뒤로(B)

다음(N)>

취소

도움말

Adaptec Easy CD Creator Wizard

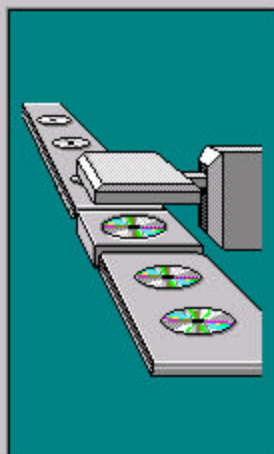

Ready to Create CD

Adaptec Easy CD Creator is ready to create your CD. What would you like to do?

- ☒ Create CD now
- ☐ Create CD later

If you select "Create CD Later," you will be able to make changes to the CD layout before creating the CD. When you are ready to create the CD, select "Create CD" from the File menu.

Click on Finish to close the Easy CD Creator Wizard and proceed with creating the CD.


<뒤로(B)

마침

취소

도움말

'Create CD now'

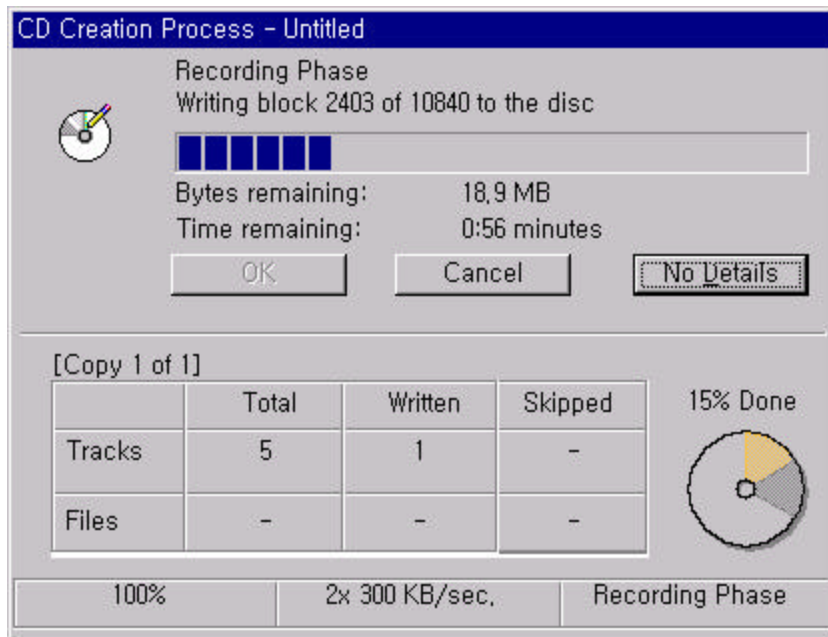

CD

가

CD

CD

1

2

Writer

Writer

LED가


가

CD Creator

Create a CD


, [Advanced]

DAO(Disk At Once)

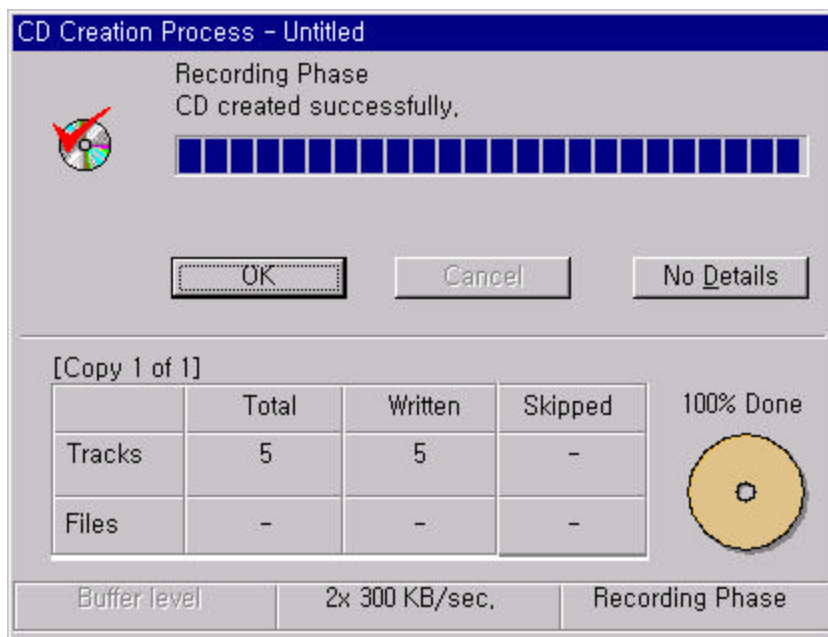

2

Wizard

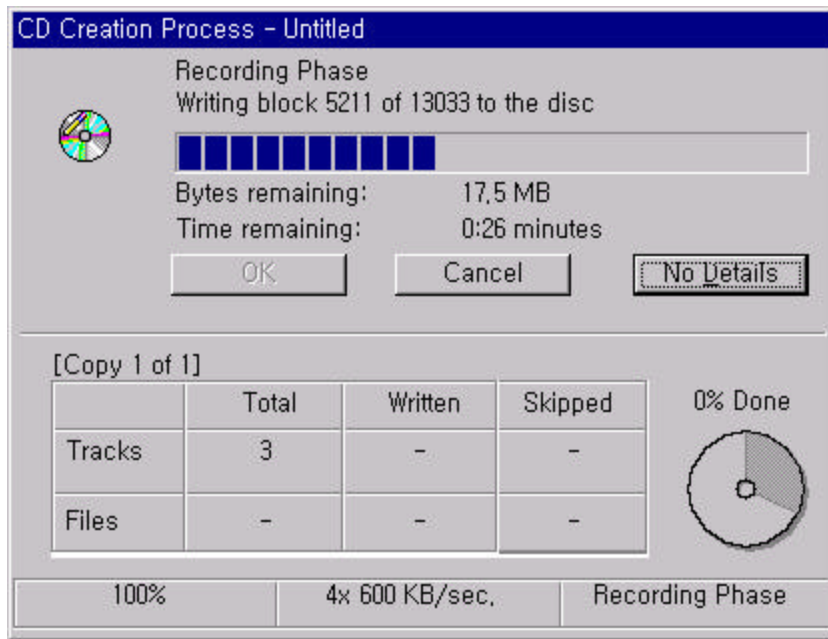

5

3

가

, leave the session open

가

가

2

CD

CD

()

가

Track 01

Track 05


Track 06

Track 08

가

CD

Disc Information()

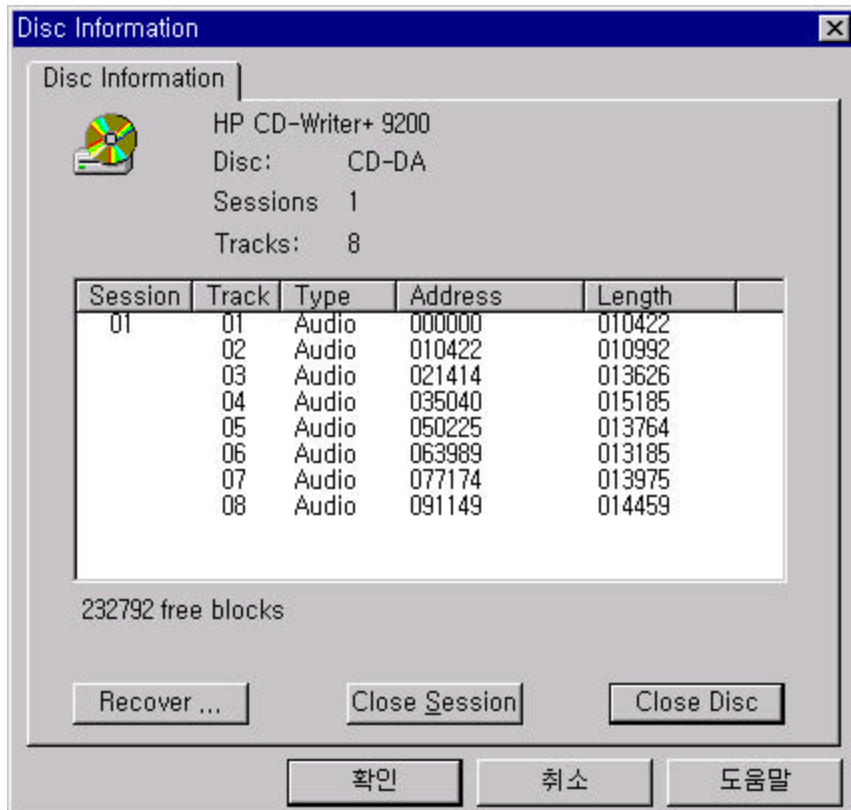

Close Session

Session()




01 8


가 2

가


Close Session and Leave Disc Open

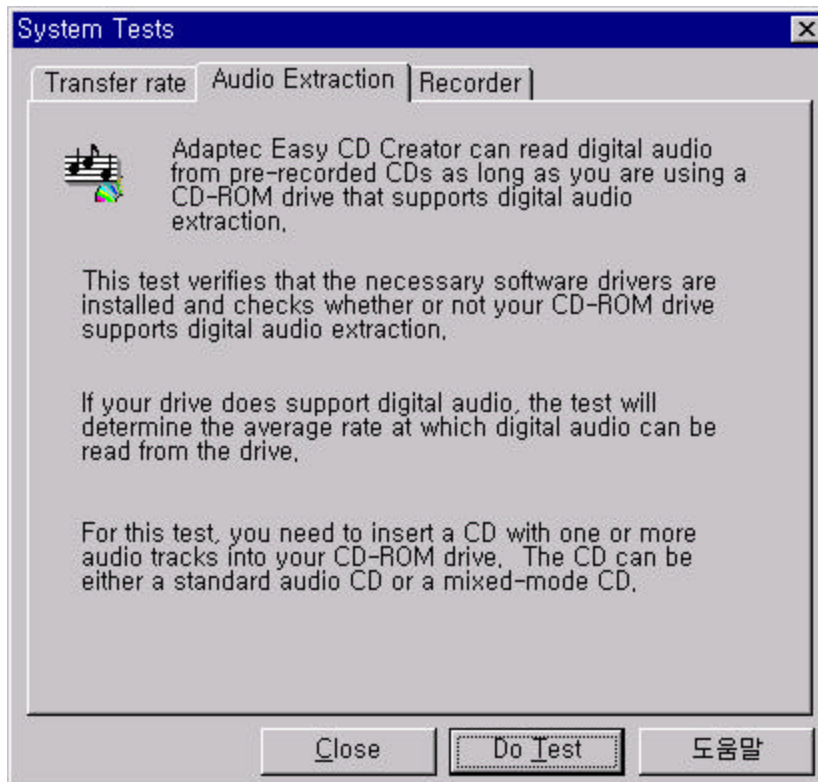

CD CD-ROM Drive CD-Writer Do Test ,
 CD가 CD-ROM Drive CD-Writer 가
 . Test 'Test' .

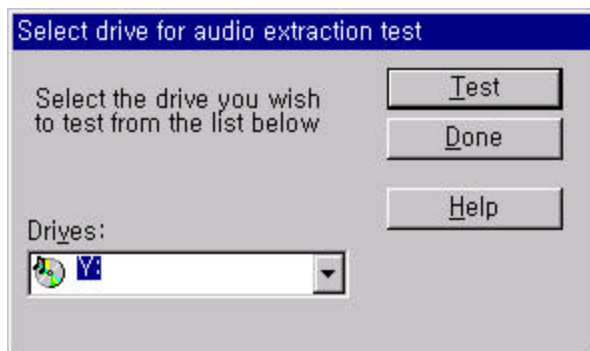


CD
 HP 9200e , 가 1365KB/sec가 9
 . (1 = 150KB/sec)

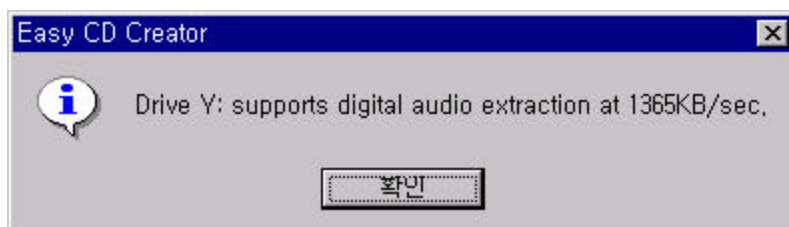

가 CD 가 1000KB/sec , CD

CD To CD 4 가 CD-ROM Drive
 16 , 24 CD CD-ROM
 Drive 가 CD To CD CD
 . CD CD CD (wave)

Wave

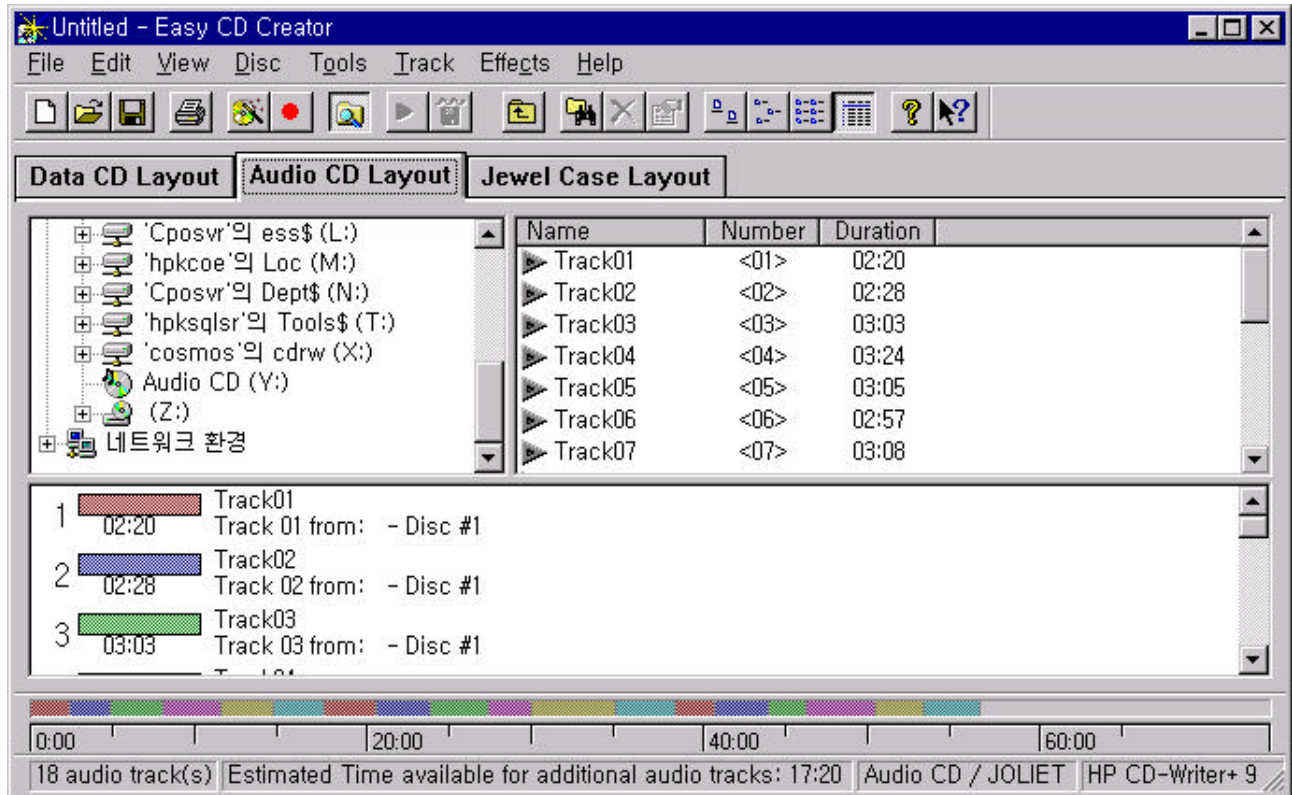


, Audio CD Layout

.(Drag &Drop).


, Ctrl+A

Edit Select All

가 , 가

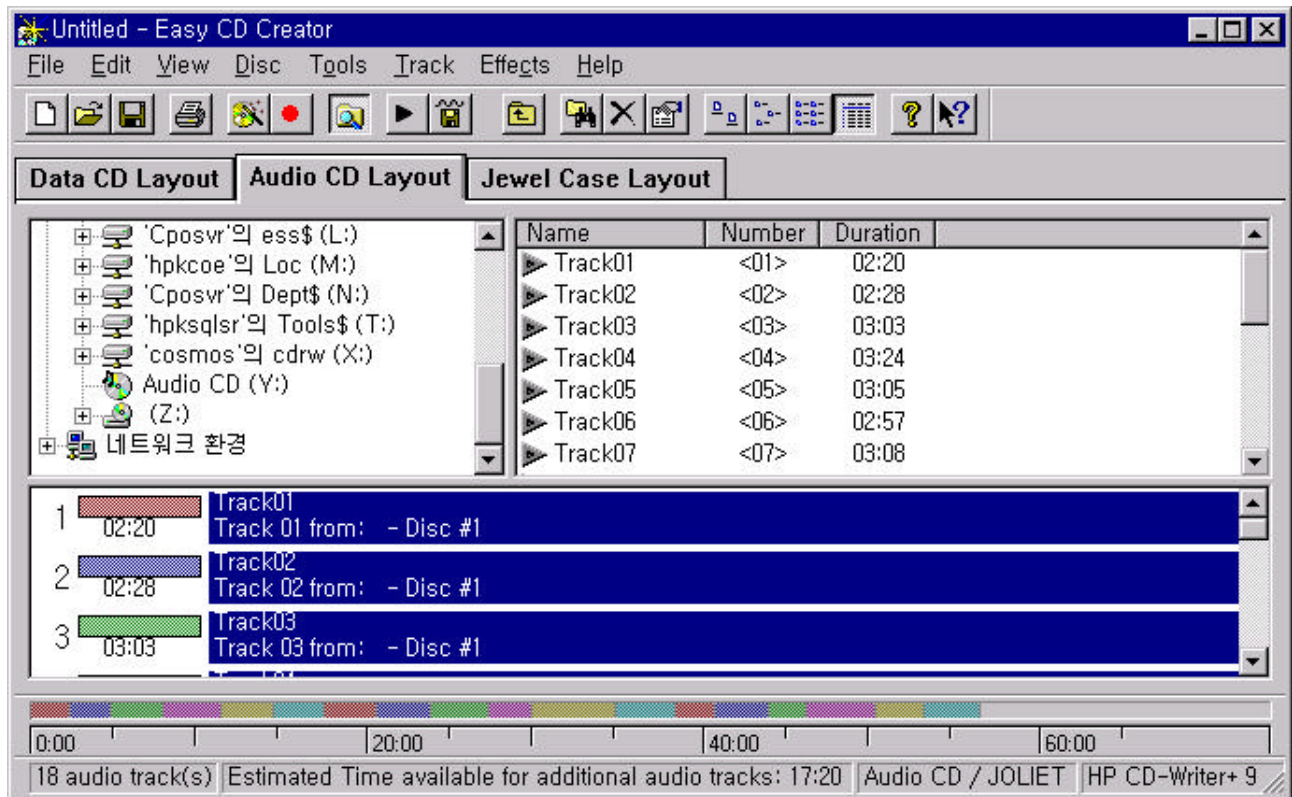


Track - Pre-record to WAV file

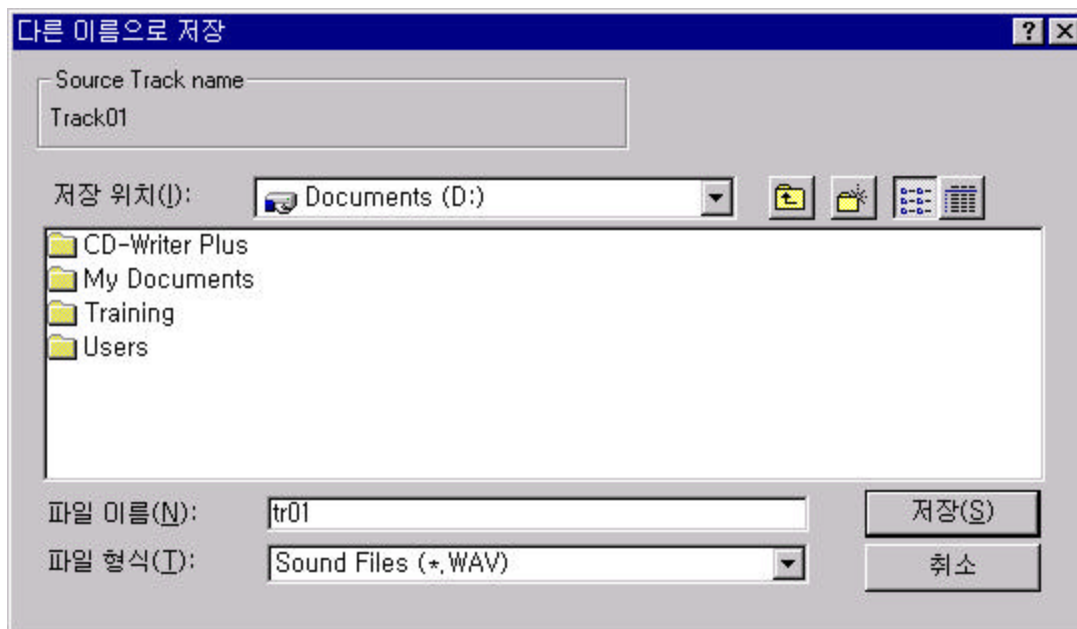

Track01 , Wave

1 10Mb

가

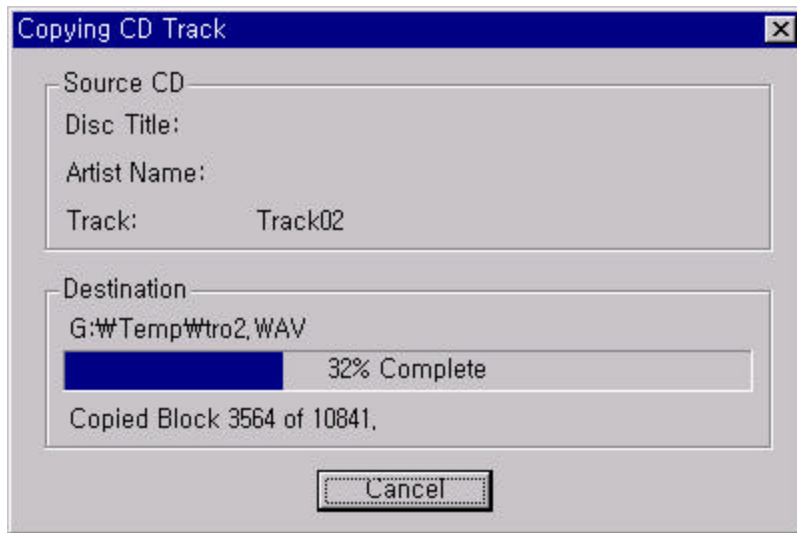


CD

Wave

CD

Audio CD Layout 가

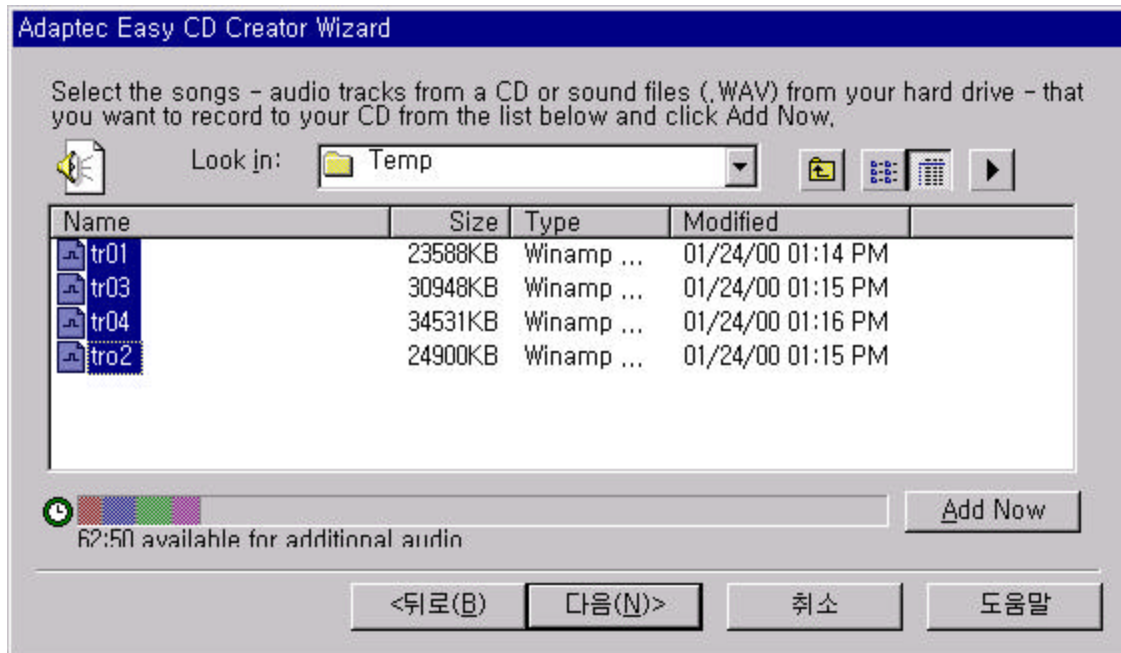

CD

가

가

CD

CD

CD

CD

가

?

CD CD To CD

CD-ROM Drive



CD

Tools-Options

, Wave

Audio Extraction

Slow

CD

CD

CD

CD

, CD

CD

가

CD

CD

CD-ROM Drive DAE

3. Disc Image


CD-ROM Drive가 CD-Writer 가 , CD
CD To CD 가 CD

CD , CD

2가

<1> CD


, CD

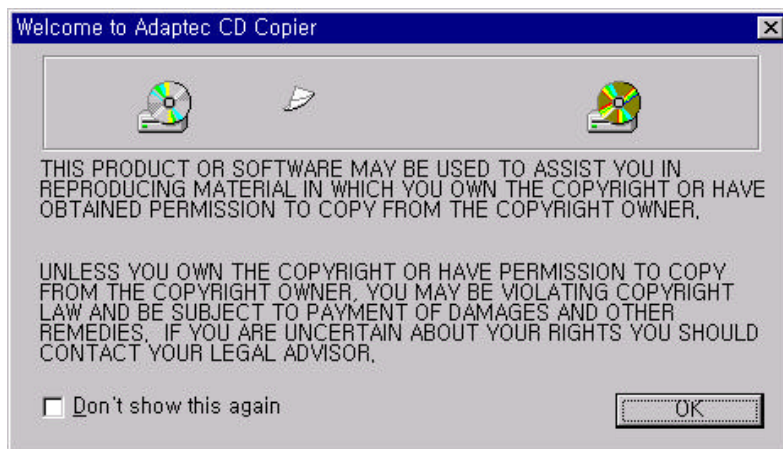

Create a CD

CD

CD

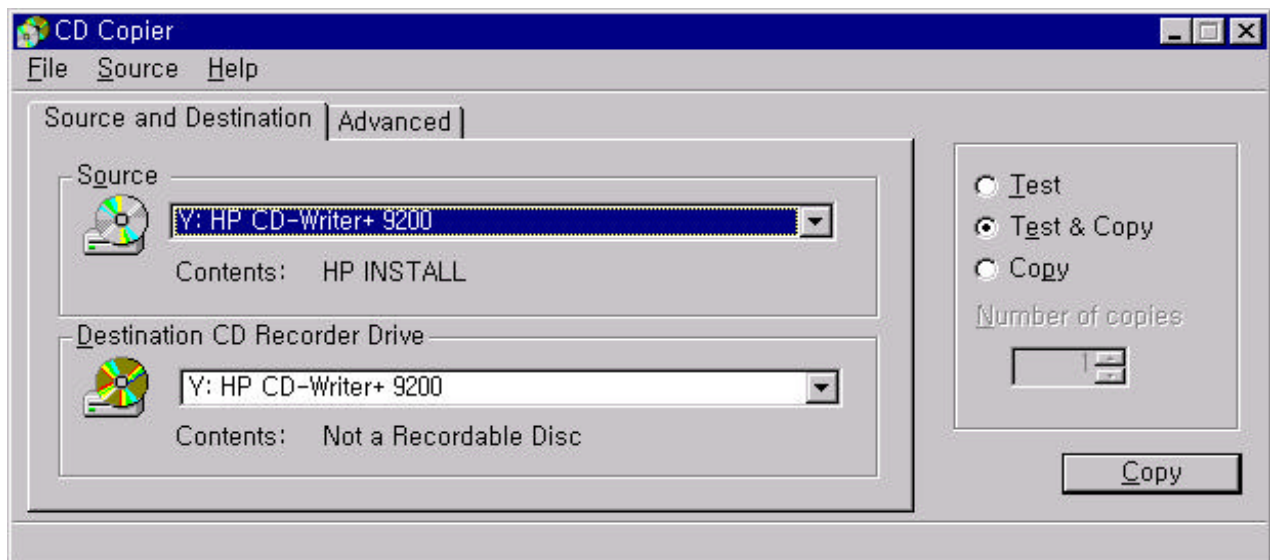


, Source(CD), Destination(CD-Writer)

CD-Writer가

CD

Copy 가

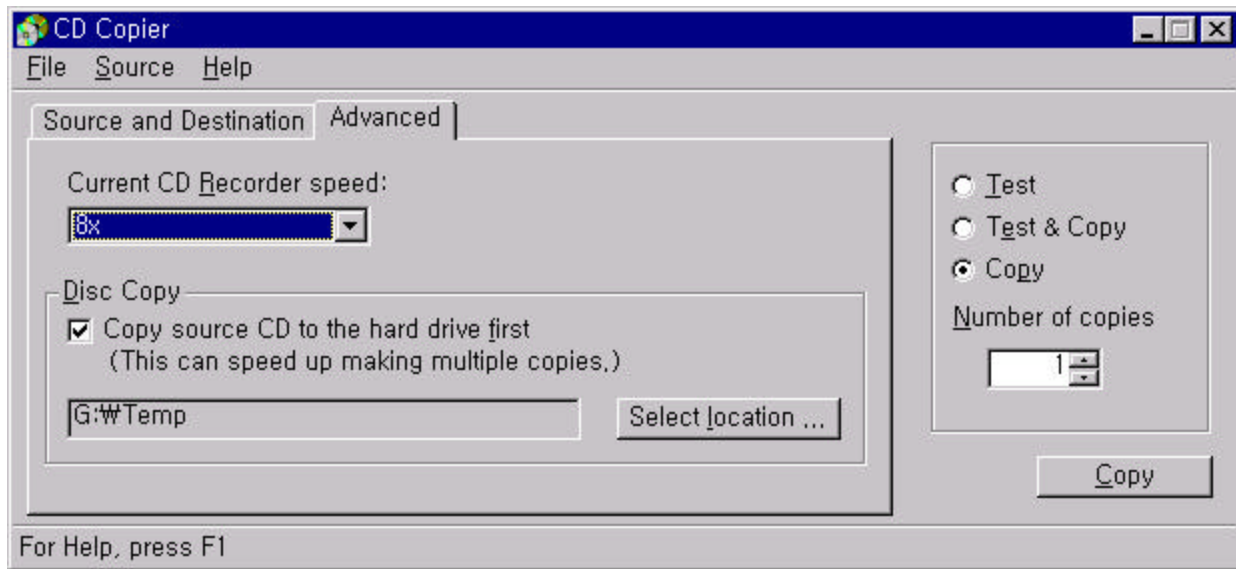

Advanced

CD-Writer가 가

Disc Copy

Select location

'Test & Copy'

'Copy'

'Copy'

CD

가

CD

CD

(* .cif)

CD

CD

Source


, CD-ROM


Image File

Image File


Source

Select

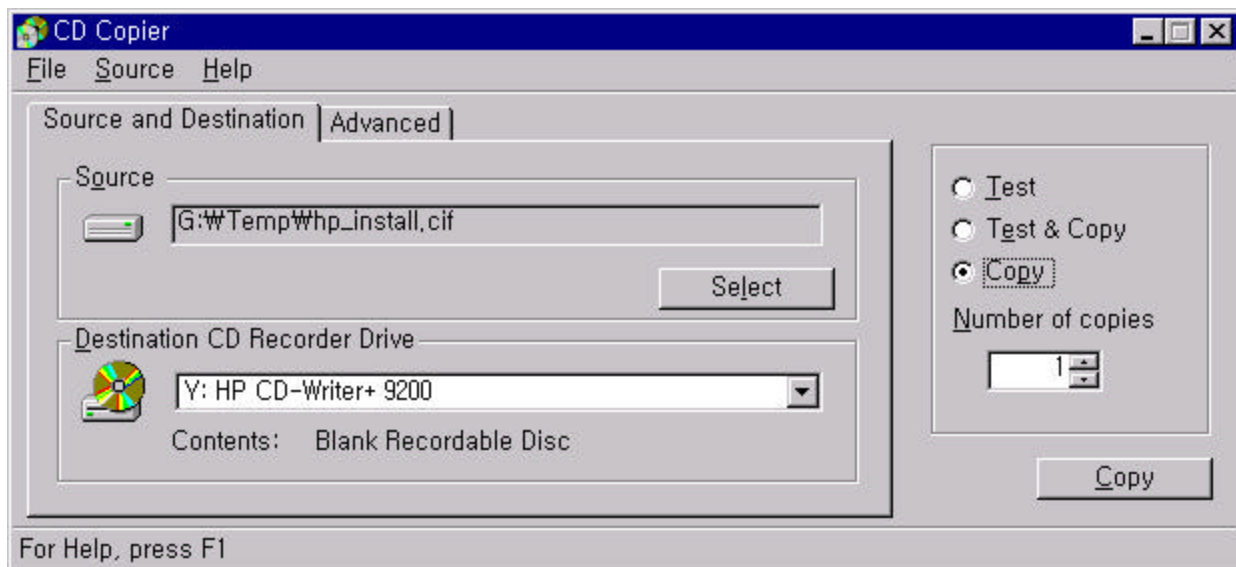

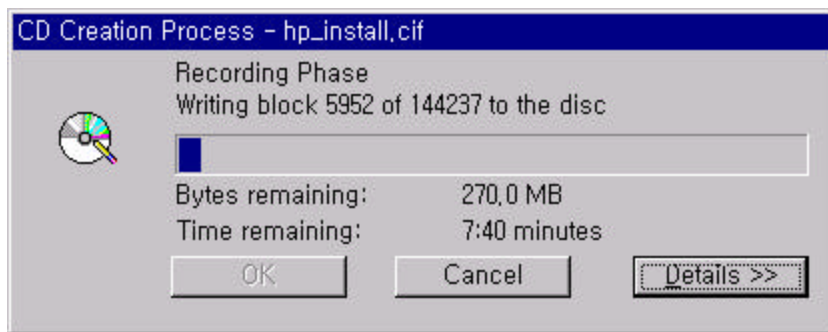

. hp_install.cif

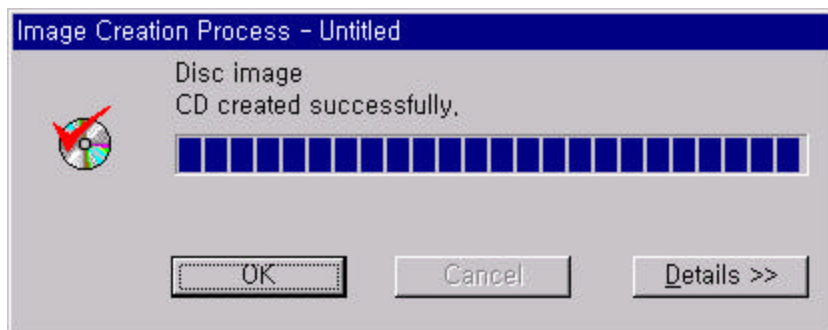

() CD 3.5C CD TAO CD
4.02 CD DAO
DAO CD

<2> CD

CD

CD

Data CD Layout 가

가


가

가

가

CD

가

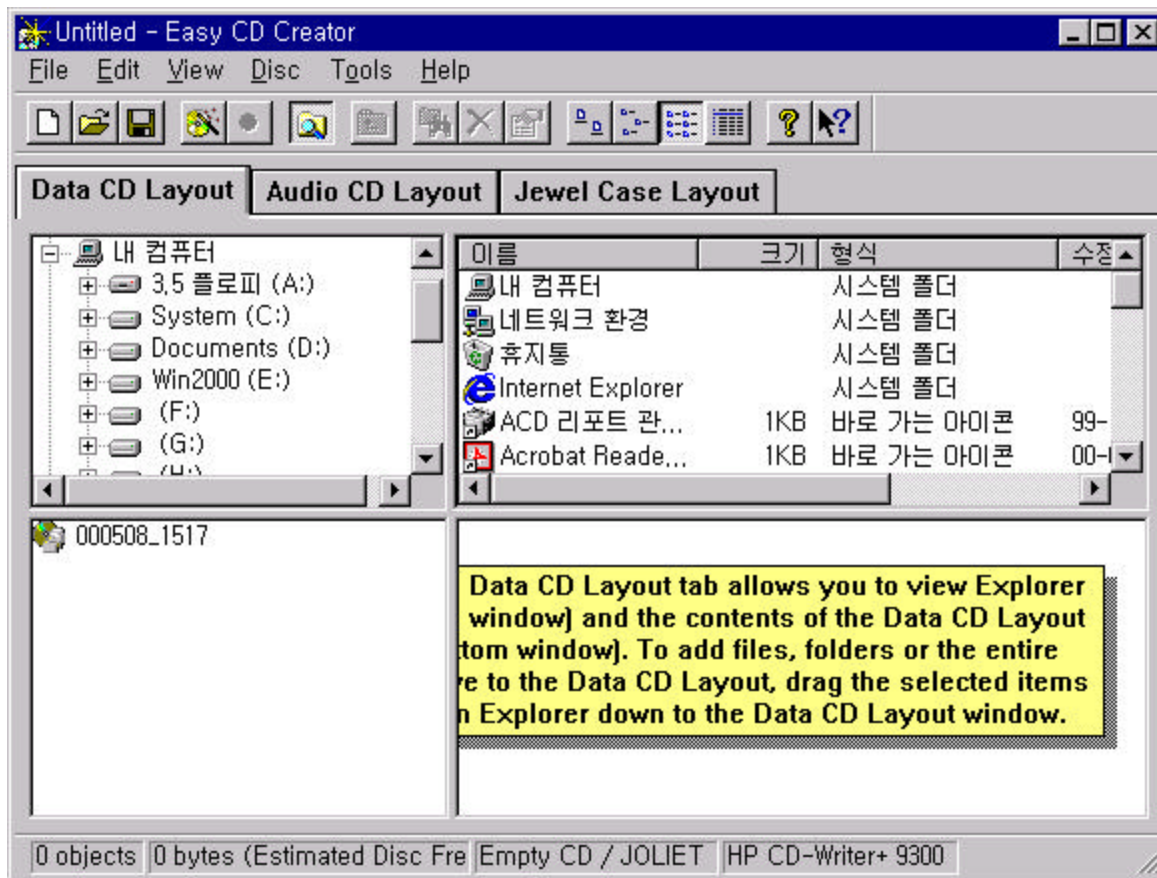

CD

(Wizard)

2


, CD-ROM Drive

2

Data

CD Layout 가가 (Drag & Drop).


(Copy & Paste).

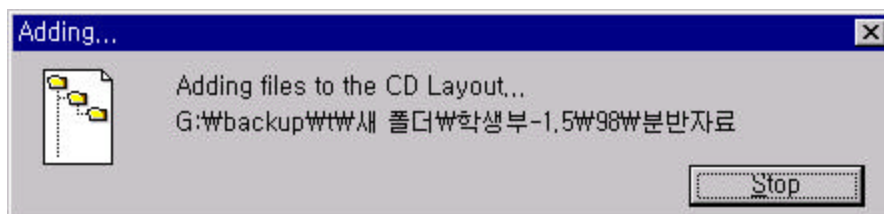

, Data CD Layout

가


가

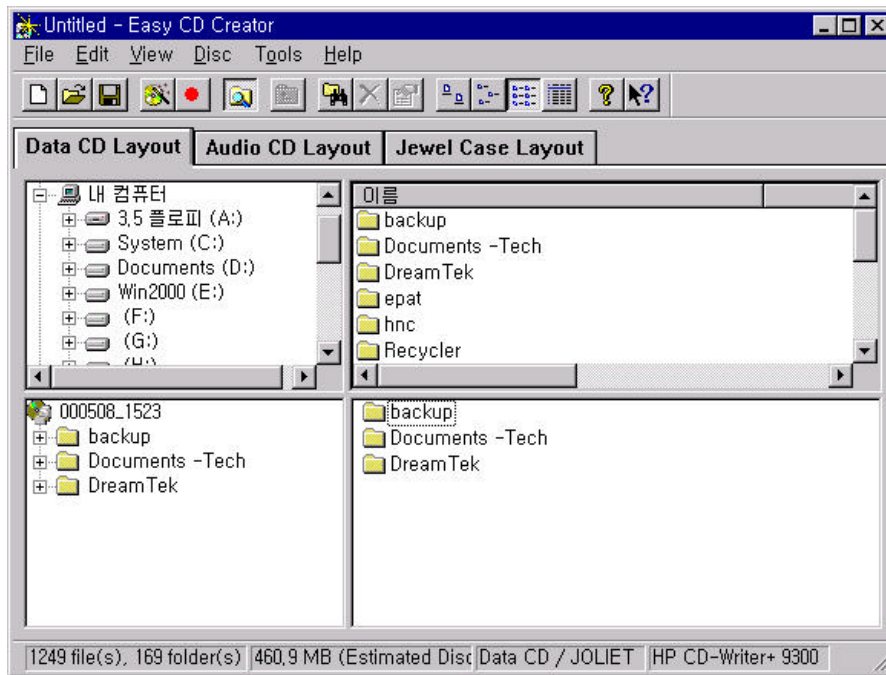

3 . 1249 , 169 ,
460.9MB 가

File - CD Layout Properties , General Data Settings

- (1) General CD
(2) Data Settings File System Mode

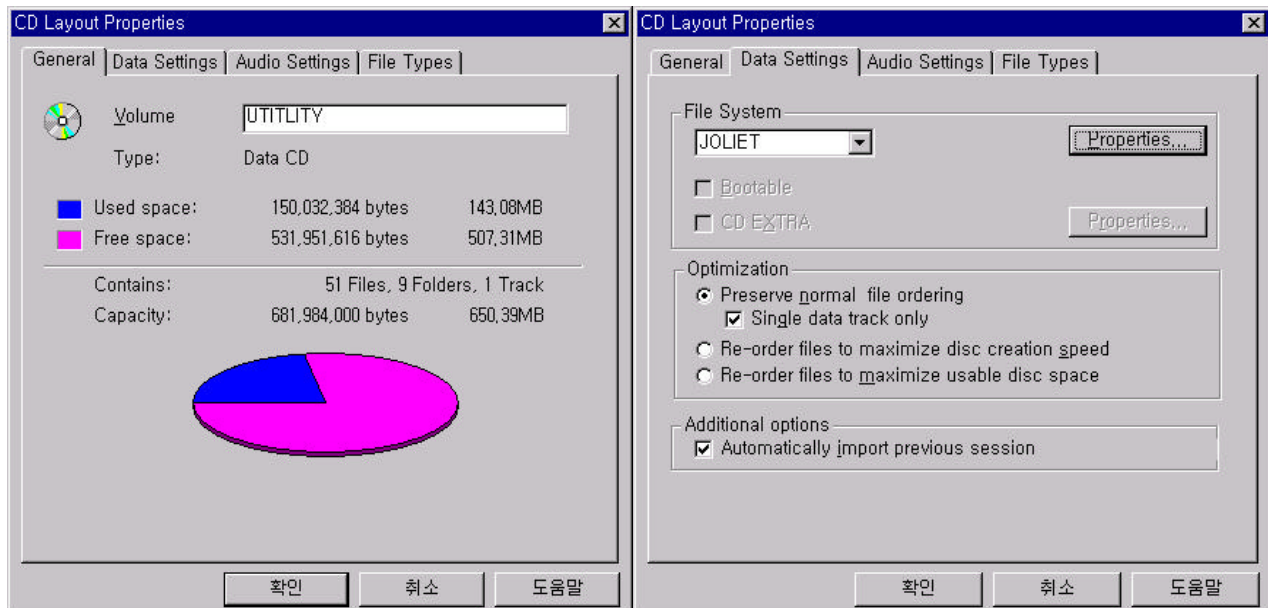

Data Settings

File System 27가 가 Joliet ,
CD Joliet File System ,


OS/2 CD, ISO 9660
 ISO9660
 ISO 9660
 8+3 CD, CD Extra CD
 (CD, CD Extra CD)

'Properties' 가 Mode
 Mode Mode 1, Mode 2 CD-XA (Mode 2)

CD 가
 , CD-ROM (Mode 1) : Data, Program , 2.048 / CD
 , CD-XA (Mode 2 Form 1) : Data, Program , 2.048 / CD
 CD

File – Create Disc Image


(S)

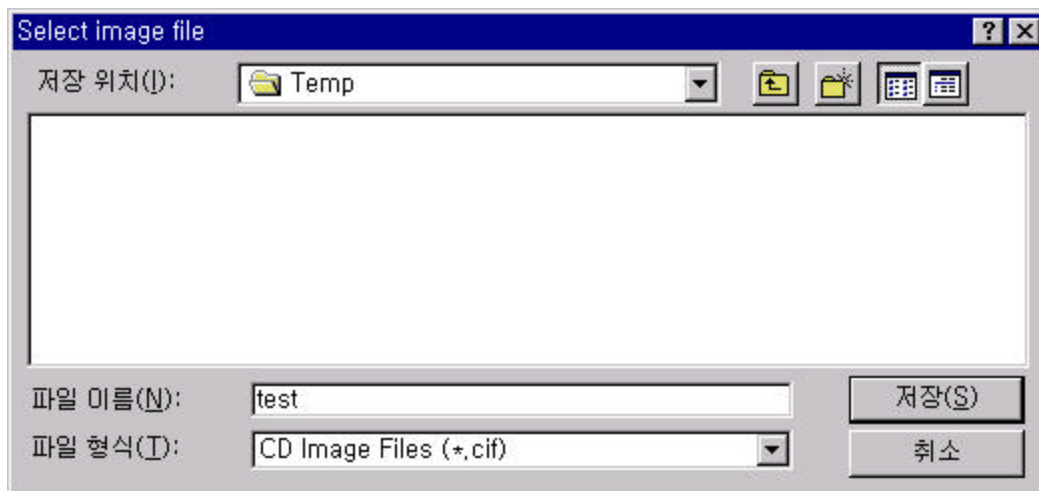

'test.cif'

Disc Image

가

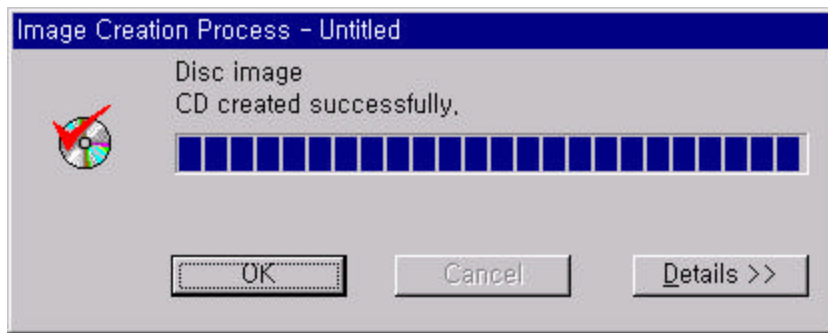


'test.cif'

CD

File – Create CD From Disc Image

(O)

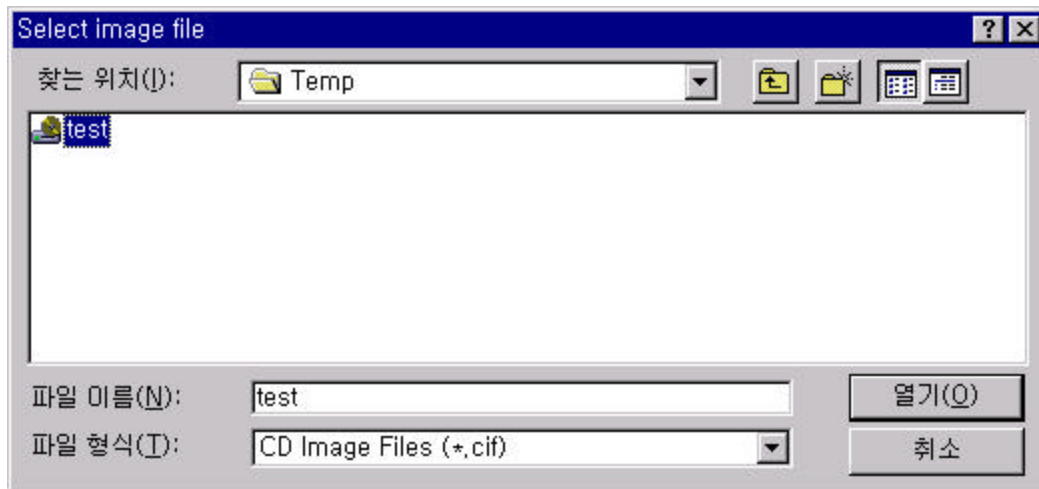

(O)

, Create CD ()

, Close Disc

General() Test Only, Test and Create CD, Create CD 3가

. Test()

(Write speed)

. 9310i

10X, 8X, 4X, 2X, 1X

가



'Number of copies'

CD

1

, 2-3

3-4



가 TAO, DAO

. TAO Leave Session Open, Close Session and Leave

Disc Open, Close Disc

가

Leave Session Open

,

CD

Close Session and Leave Disc Open

Leave Session Open : CD
가

Close Session and Leave Disc Open : CD-ROM Drive ,
(CD)

Close Disc : , CD 가

DAO(Disc At Once) : TAO CD


,
DAO
가 , CD ,
CD

General Advanced , ‘ ’ ..

,
 , Error가 가
 ,


CD
CD가 CD
CD-Writer CD , CD Disc-
Disc Information . CD Session , Track , Disc Type
 , 1, 1,
CDROM ,
 . Disc CD-XA CD-XA
 , CD-ROM CD-ROM
가 가 , Type Data Audio가
 , 가

% Mixed CD, Extra CD

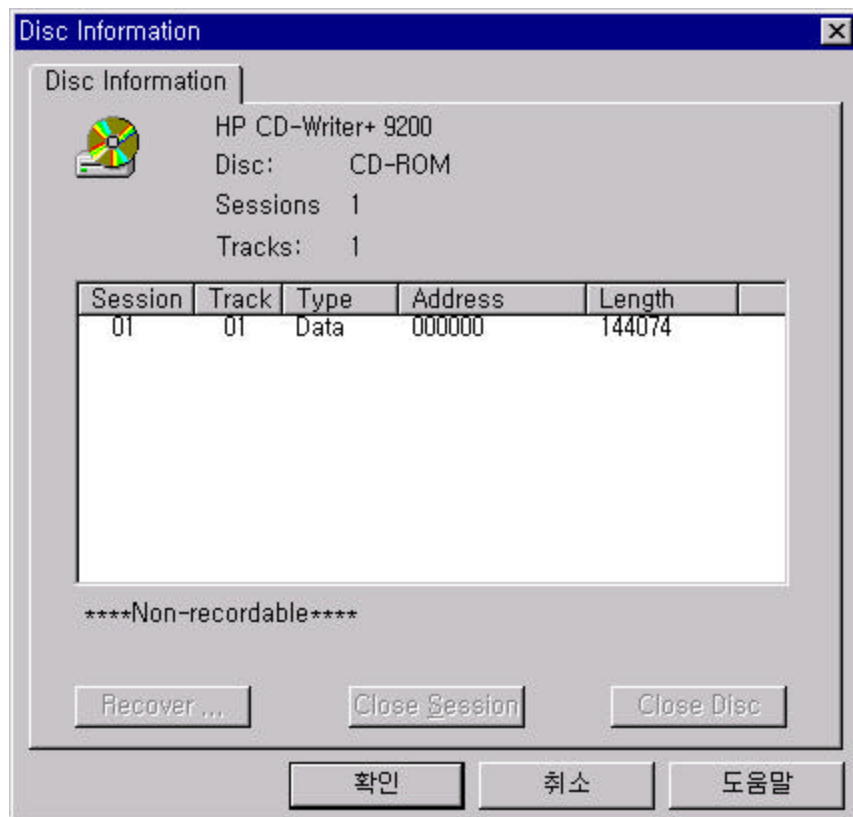

4. CD Extra CD

CD-Extra CD . CD-Extra CD < >
, CD-Extra CD Disk Information .

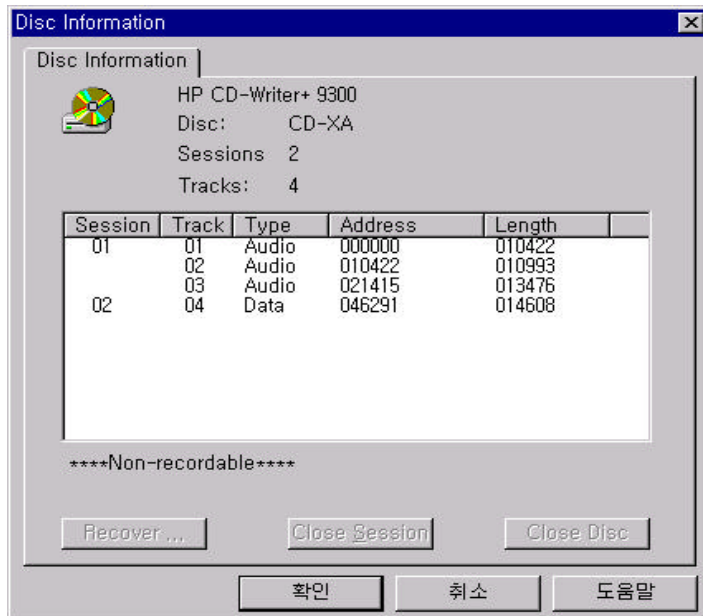

1 CD 6 가 , 2

CD-Extra CD .


가 CD

CD

CD

가 . (가) 가

CD File-CD Layout Properties . Data Setting .

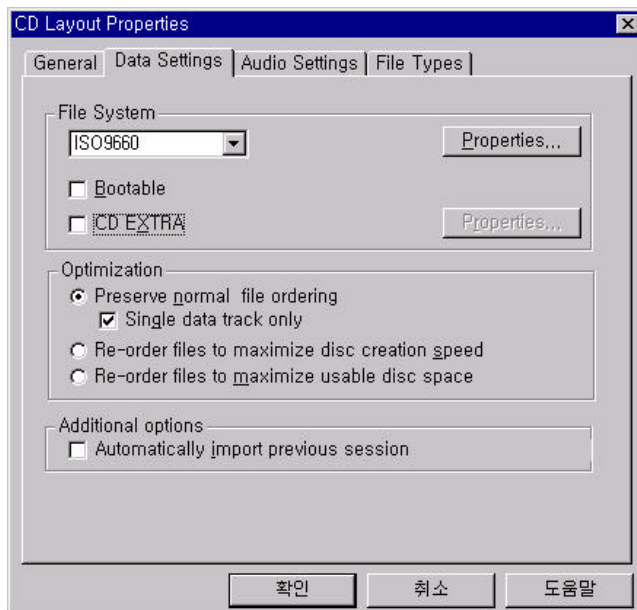

File System

Joliet

ISO 9660

CD Extra


Layout

CDPLUS

가 가

. CD Extra CD

가

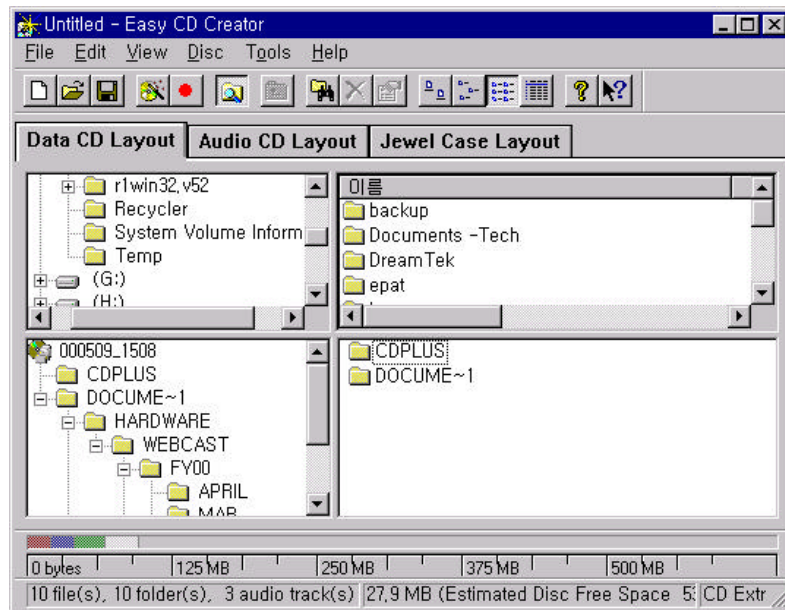

가

Create CD

(

)

, Test

CD-Extra CD



Create CD

Advanced

CD

'Close Session and Leave Disc Open'

'Close Disc'

Mixed CD, CD-Extra CD

CD

Close Session and Leave

Disc Open

가

가

,
· , CD-Extra CD ,
·

CD

Close Disc

CD

CD-Extra CD

가

CD , CD

CD . Mixed CD


CD

Mixed CD CD-Extra CD가

·

5. Mixed CD

CD Mixed CD Mixed CD Data
 Data CD Layout 가 , Audio Audio CD Layout 가
 , CD-XA Joliet
 Mixed CD CD CD
 CD Protection , CD 650Mb
 650Mb , Protection CD
 Mixed CD
 CD
 , 2

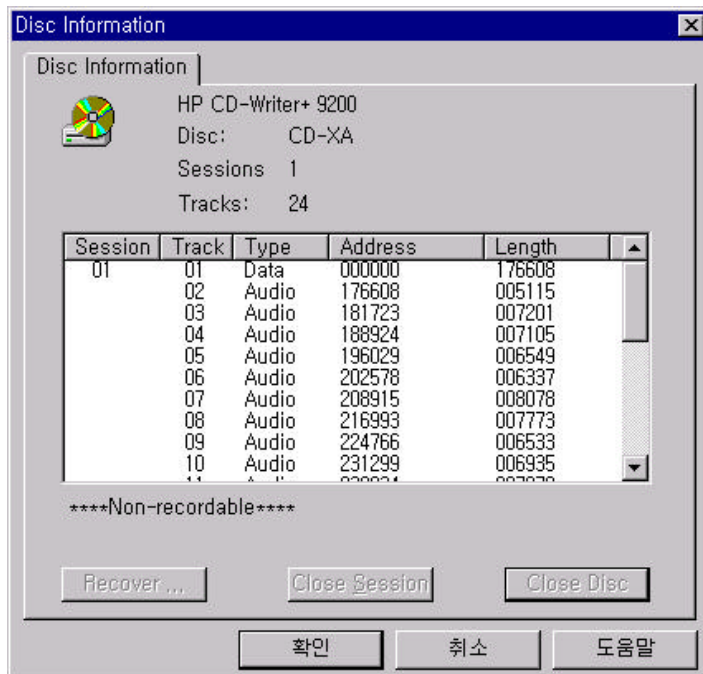


6. Booting() CD .

CD-ROM Drive CMOS . Booting
CD 가 , CD
CD .

CD . CD
CD-ROM Drive , CD Config.sys,
Autoexec.bat . Windows 98 CD-
ROM Drive 가 Windows 98
. Windows 98 가 CD-ROM Drive , CD
Config.sys, Autoexec.bat 가 .

가 CD , File-CD Layout
Properties Data Setting File System ISO 9660 Bootable

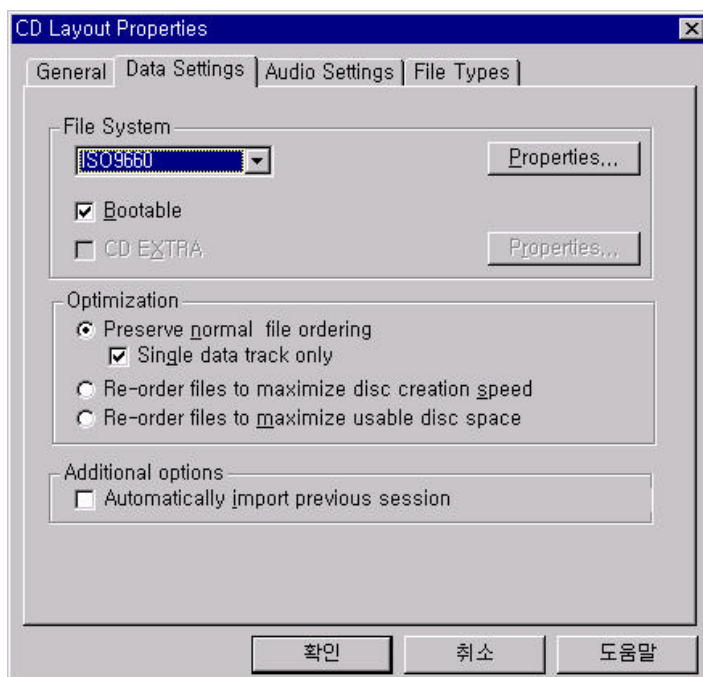

Properties Mode 2 . CD Layout Properties ,
Floppy Drive(A:) 가 .



		CD Layout	가	.
			Data CD Layout	가
ISO9660
CD	,	,	.	.
.

A. CD Format

(1) CD(Mixed Mode CD) : ,
 , 2 99
 . CD CD
 . CD 가 ,
 . CD 가
 1 가 , CD Plus (CD Extra)

(2) CD Plus : CD , CD
 ,
 . CD-ROM/XA .

(3) HFS (Hierarchical File System) :
 . , (Data fork) (Resource fork)
 가 .
 , MS-
 DOS .

(4) CD : CD . ,
 CD . CD
 El Torito . El Torito CD
 . CD CD
 A 가 . ,
 B . CD CD ,
 CD MSCDEX.EXE CD Config.sys, Autoexec.bat

(5) CD-ROM : CD , ISO 9660, Joliet, Romeo
 . CD .

(6) (Multi Session) CD :

CD-R

, (30Mb) CD
CD-ROM Mode 1 CD-XA Mode 2 CD
, 가
CD , CD CD
CD CD

B. CD

(1) Track At Once : 가

CD 2 ()
TOC CD ,
TOC , CD

(2) Disk At Once :

CD ,
TOC

(3) Packet Writing : CD

가 ,
CD가 ,
CD , CD CD
CD , 가

< Web Site BBS >

1. Adaptec : www.adaptec.com , www.adaptec.co.kr

2. (go mmc)

3. www.hpcdwriter.com : HP CD

4. www.shuttletech.com : CD-Writer ()